

# Chef LED Bulb Installation and Warranty Information



## Important Safety Information



**ELECTRIC SHOCK HAZARD:** Turn OFF power switch, disconnect unit from power source, and allow unit to cool before performing any installation, cleaning, adjustments, or maintenance.


**FIRE HAZARD:** Bulb is hot during operation. Do not install bulb above or around combustible materials. Discoloration or combustion could occur. Unit must be installed in non-combustible surroundings only.

## Installing A Chef LED Bulb

### IMPORTANT NOTES:

Read all safety information and installation instructions before beginning installation. Save these instructions for future reference.

1. Turn off the unit and disconnect from the power source. Allow the unit to cool.
2. Unscrew the existing light bulb from the light socket.
3. Holding the bulb by the bulb housing, install the Chef LED bulb assembly into the empty socket. Tighten securely.
4. Point the LED bulb toward the surface below.
  - a. Hold the knurled base of the bulb assembly firmly with one hand.
  - b. Grasp the bulb housing with the opposite hand, and rotate the bulb housing until the open side of the hinge is facing down. The LED bulb assembly has a rotational range of 320°.
  - c. Pivot the bulb downward at the hinge between 45°–90° to direct the light where desired on the surface below.

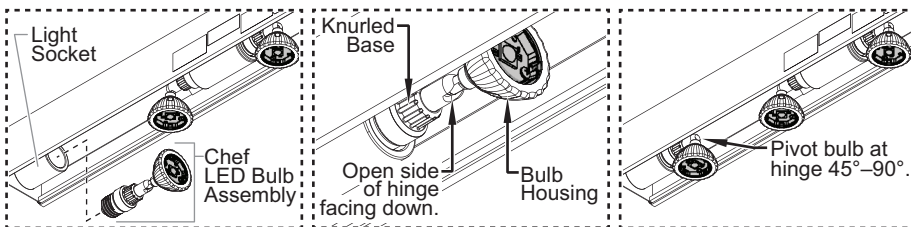

## Removing A Chef LED Bulb

1. Turn off the unit and disconnect from the power source. Allow the unit to cool.
2. Pivot the LED bulb up until it is completely horizontal with the base of the Chef LED bulb assembly.
3. Holding the bulb by the bulb housing, unscrew the Chef LED bulb assembly from the light socket.

## Limited Warranty

Hatco warrants the Chef LED light bulb (Product) that it manufactures to be free from defects in materials and workmanship, under normal use and service, for a period of one (1) year from the date of purchase when installed and maintained in accordance with Hatco's written instructions. Hatco's liability and Buyer's exclusive remedy for any claims related to the Product will be limited solely to replacement of Product by Hatco. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, INCORRECT SUPPLY VOLTAGE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL OR WORKMANSHIP. HATCO WILL NOT BE LIABLE, UNDER ANY CIRCUMSTANCES, FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, INCLUDING BUT NOT LIMITED TO LABOR COSTS OR LOST PROFITS RESULTING FROM THE USE OF OR INABILITY TO USE THE PRODUCTS OR FROM THE PRODUCTS BEING INCORPORATED IN OR BECOMING A COMPONENT OF ANY OTHER PRODUCT OR GOODS. THE FOREGOING WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF FITNESS FOR PARTICULAR PURPOSE AND MERCHANTABILITY.

When making a warranty claim, the Chef LED light bulb must be shipped prepaid with a copy of the proof of purchase to Hatco Corporation for examination and testing. Any labor costs, travel expenses, and any other charges involved in the removal, installation, or replacement of the defective/returned Chef LED Light Bulb will be the purchaser's responsibility.

### Directions for filing a warranty claim:

Return the defective Chef LED Bulb with proof of purchase and the return form at the bottom of this page to the following address:

Hatco Corporation  
ATTN: LED Warranty  
208 E Deck Street  
Sturgeon Bay, WI 54235

Upon receipt, Hatco will complete an inspection. If the bulb is determined to be under warranty, a new replacement Chef LED Bulb will be sent. Please provide return address information in the form below.

### Hatco Chef LED Bulb Return Form

Company Name: \_\_\_\_\_

Attention: \_\_\_\_\_

Street Address: \_\_\_\_\_

City: \_\_\_\_\_

State: \_\_\_\_\_

Zip Code: \_\_\_\_\_

#### Hatco Use Only

Model:

Inspection Date:

Manufacturing Code:

Replacement Order: