

Care Instructions

Polycarbonate Drinkware

While Carlisle's Polycarbonate Drinkware is durable, proper maintenance and care can maintain its appearance and provide a longer commercial service life. Please review and follow the care and use instructions below. Feel free to contact us directly with any questions.

DO

- Plastic drinkware products should be treated like any fine glassware.
- These drinkware products are commercial dishwasher safe.
- To avoid protein build-up and cloudiness caused from oils in the dishwasher, it is recommended to presoak plastic drinkware items before dishwashing.
- Wash plastic drinkware items as soon as possible to maintain clarity and quality.
- To avoid scratching, use only non-abrasive sponges and pads to clean plastic drinkware products.
- Use electric glass washers only if equipped with cloth brushes.

DO NOT

- Do not use harsh abrasive cleaners, steel wool or metal scouring pads when removing stains.
- Do not use chlorine bleach or chlorine-based sanitizing solutions when caring for plastic drinkware products.
- To prevent scratching and damage, do not overload your dishwasher rack.
- Do not expose plastic drinkware to direct flame or temperatures in excess of the max temperature noted on the product specification.
- Do not microwave unless otherwise noted.