



CARE AND USE GUIDE

VACUUM INSULATED STAINLESS STEEL CARAFE

GENERAL CARE


- Before first use, and as soon as possible after each use, wash all parts with warm, soapy water. Rinse all parts thoroughly and allow time to dry. Store with stopper off.
- Contents should not be left in the container for longer than 24 hours. As soon as possible after each and every use, wash all parts with warm, soapy water. Rinse all parts thoroughly with clean water. Allow all parts to dry completely prior to next use or storage.
- DO NOT use abrasive soaps, scouring pads, brushes, or other objects to clean inside of container.
- DO NOT use abrasive cleaners or scrubbers to clean outside of product since they may dull finish.
- This product is top-rack dishwasher safe; however, hand washing is recommended as the dishwasher uses harsher detergents and hot water that may affect the appearance of your product.
- Residual liquids, foods, or other contents may become trapped between product components, such as lid parts, container parts, gaskets (flexible band around lid and/or stopper), or straws (if present in the product). Although this product is top-rack dishwasher safe, hand washing is recommended to ensure that these parts of the product are thoroughly cleaned.
- For maximum thermal efficiency, preheat or pre-chill the product just prior to use. Fill with hot/cold tap water, attach lid, let stand 5 to 10 minutes and empty water. After filling container with contents, re-cover with lid to increase thermal efficiency. Never use a microwave, conventional oven, or other heat source for this purpose.

ASSEMBLY & USE

TWIST-AND-POUR STOPPER (IF PRESENT):

1. Remove stopper (A) by twisting counterclockwise.
2. Remove gasket(s) (B and B1 - if present) from underside of stopper (A).
3. Wash all parts separately, then re-assemble. Ensure gasket(s) (B and B1 - if present) are properly seated to minimize leaking.

* Image for reference only: actual product may vary

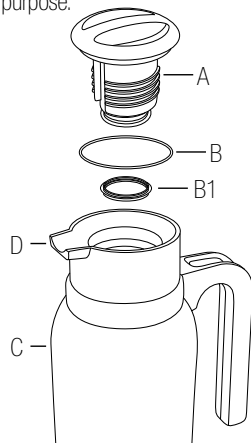

4. Fill container (C) with contents. Do not overfill: Leave space for the stopper (A), to avoid overflow.
5. Replace stopper (A) by twisting clockwise.
6. To pour, twist stopper (A) counterclockwise ½ - 1 turn. Orient product so that pour indicator arrow is pointing in-line with spout (D). Proceed to pour. Note: Stopper does not need to be removed completely to pour contents.
7. Re-tighten stopper (A) by twisting clockwise.

PUSH-BUTTON STOPPER (IF PRESENT):

1. Remove stopper (E) by twisting counterclockwise.
2. To disassemble, lift up on stopper-tab (K) of stopper-cover (L) until completely removed.
3. Depress and twist washer (M) clockwise until it aligns with washer-post (Q). Washer-spring (N) will naturally release washer (M).
4. Remove washer-spring (N).
5. Remove valve-plate (R) and valve-spring (P) by pulling downward on base of valve-plate (R).
6. Remove gaskets (H and I).
7. Wash all parts separately, then re-assemble. Ensure gaskets (H and I) are properly seated to minimize leaking.
8. Fill container (G) with contents. Do not overfill: Leave space for the stopper (E), to avoid overflow.
9. Replace stopper (E) by twisting clockwise. Depress the push-button (O) 2 to 3 times to release pressure.
10. Securely grip handle (J) and press push-button (O).
11. Tilt product and pour contents through spout (F).
12. Bring product to an upright position and release push-button (O).

