

## OPERATOR'S MANUAL HOT HOLD® SERIES



WARNING: To reduce the risk of injury, the user must read and understand this operator's manual before using this Equipment.

SAVE THIS OPERATOR'S MANUAL FOR FUTURE REFERENCE.

This document includes:

- before installation instructions
- shipping damage instructions
- important safety instructions
- site preparation and installation
- operating instructions
- cleaning instructions
- warranty statement

Revision: A, June 2019




MEISTER COOK LLC

3217-A Stellhorn Rd, Fort Wayne, Indiana 46815, USA • (800) 535-7830 • (260) 399-3800

www.meistercook.com • info@meistercook.com

# HOT HOLD® SERIES

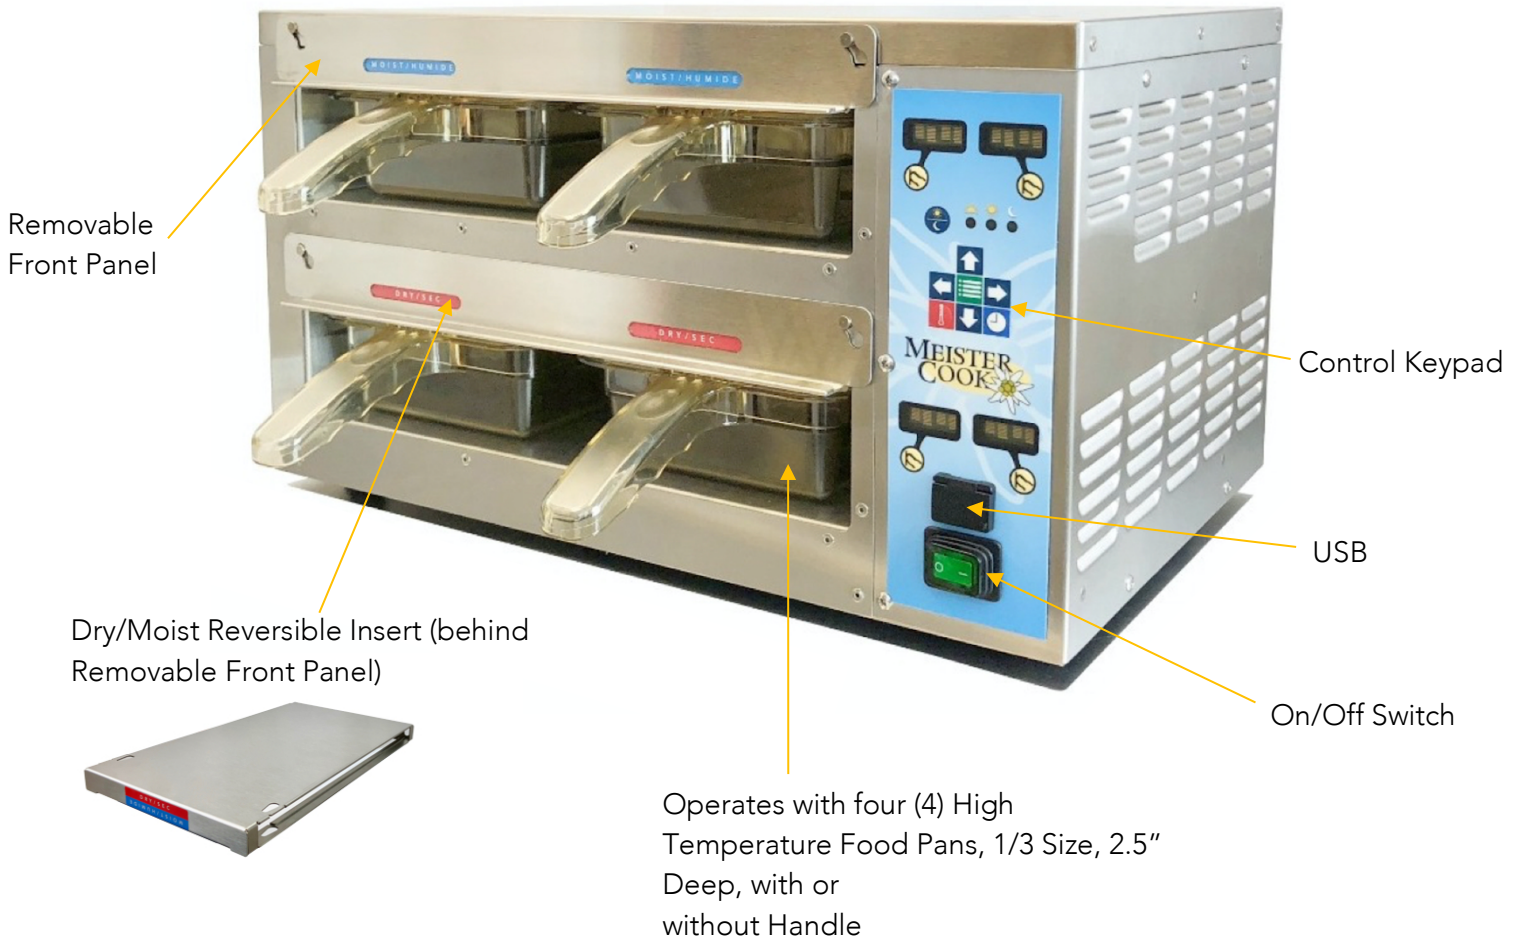

Operates with 120V/15Amp Generic Electric Outlet and NEMA 5-15P Receptacle, 6 ft. Power Cord



NEMA 5-15 Plug & Receptacle  
120 volt, 15 amp



MEISTER COOK LLC

3217-A Stellhorn Rd, Fort Wayne, Indiana 46815, USA • (800) 535-7830 • (260) 399-3800

www.meistercook.com • info@meistercook.com

## TABLE OF CONTENTS

Safety Symbol Section	Page 3
Before Installation	Page 4
Shipping Damage Claim Instructions	Page 4
Important Safety Rules	Page 5
Extension Cord Instructions	Page 7
Site Preparation and Installation	Page 8
Specifications for Hot Hold® Dry Moist Food Warmer	Page 9
Clearances Requirements for Hot Hold® Dry Moist Food Warmer	Page 11
Operating Instructions	Page 12
Programming Instructions	Page 13
Cleaning and Maintenance Instructions	Page 15
Troubleshooting Guide	Page 16
Part Numbers for Hot Hold® Dry Moist Food Warmer	Page 17
Service Support	Page 18
Limited One-Year Warranty for Commercial Products	Page 19

## SAFETY SYMBOL SECTION

The following signal words and meanings are intended to explain the level of risks associated with this Equipment. The ANSI standard safety symbols are:



**DANGER:** Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury.



**WARNING:** Indicates a potentially hazardous situation, which, if not avoided, may result in death or serious injury.



**CAUTION:** Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury.

To avoid serious personal injury, do not attempt to use this Equipment until you have read thoroughly and understand completely the operator's manual. Save this operator's manual and review frequently for continuing safe operation and instructing others who may use this Equipment.

---

MEISTER COOK LLC

3217-A Stellhorn Rd, Fort Wayne, Indiana 46815, USA • (800) 535-7830 • (260) 399-3800

www.meistercook.com • info@meistercook.com

## BEFORE INSTALLATION

NOTE: Upon receipt of your Equipment, immediately uncrate, unpack and inspect for potentially concealed shipping damage. If your Equipment is found to be damaged, save all packing materials and contact your delivery carrier immediately. Refer to "Shipping Damage Claim Instructions" on the right for instructions. Failure to follow these instructions will negate Meister Cook's or your ability to file claims and receive compensation for shipping damage.

This manual contains important safety and installation – operation instructions. Require all operators to read this manual before using this Equipment. Refer to these instructions frequently. Failure to follow the instructions contained in this manual may cause injury or damage to the Equipment and will void the warranty.

Retain this Operator's Manual for future reference.

### SHIPPING DAMAGE CLAIM INSTRUCTIONS

If shipping damage to the Equipment is discovered or suspected, observe the following guidelines in preparing a shipping damage claim:

1. Write down a description of the damage or the reason for suspecting damage as soon as it is discovered. This will help in completing the claim forms later.
2. As soon as damage is discovered or suspected, notify the carrier that delivered the shipment.
3. Arrange for the carrier's representative to examine the damage.
4. Complete all carrier claim forms and have the examining carrier sign and date each form.



WARNING: Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the Operator's Manual and Service Manual thoroughly before installing or servicing this equipment.



WARNING: Do not operate damaged Equipment. Operating damaged equipment can cause property damage, injury or death.

---

MEISTER COOK LLC

3217-A Stellhorn Rd, Fort Wayne, Indiana 46815, USA • (800) 535-7830 • (260) 399-3800

www.meistercook.com • info@meistercook.com

## IMPORTANT SAFETY RULES



**WARNING:** Read all instructions. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury. The term “Equipment” in all of the warnings listed below refers to your Dry Moist Warmer.

**SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:

### WORK AREA

- **Keep work area clean and well lit.** Cluttered or dark areas can increase the likelihood of accidents.
- **Do not set liquids on or near Equipment.** Liquids entering Equipment will increase the risk of electric shock.
- **Do not cover Equipment or stack other non-approved objects on top of Equipment.** Unintended items on Equipment can increase the risk of fire.
- **Do not use Equipment outdoors.** Outdoor conditions can increase the risk of electrical shock.
- **Do not place Equipment on or near a hot gas or electric burner or in a heated oven.** This creates an increased risk of fire and electric shock.

### ELECTRICAL SAFETY

- **Equipment plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs.** Modified plugs and non-matching outlets will increase the risk of electric shock.
- **Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges, refrigerators and other foodservice equipment.** There is an increased risk of electric shock if your body is earthed or grounded.
- **Do not expose Equipment to wet conditions. Do not immerse cord, plug or Equipment in water or other liquids.** Water or other liquids entering Equipment will increase the risk of electric shock.
- **Do not abuse the cord. Do not yank cord to disconnect from power outlet. Never use the cord for carrying, pulling or unplugging the Equipment. Keep cord away from heat, oil, sharp edges, moving parts or the edge of table or counter.** Damaged or entangled cords increase the risk of electric shock.

## FOOD SAFETY

- **Equipment must be operated with removable front panel.** Equipment is designed to hold various food products for an extended time period when used with the removable front panel.
- **Extended food hold time.** Equipment is designed for temporary extended food holding. Ensure safe food temperatures before food consumption or serving customers food for consumption.

## EQUIPMENT USE AND CARE

- **Stay alert, watch what you are doing and use common sense when using Equipment.** Do not use Equipment while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating Equipment may result in serious personal injury.
- **Avoid touching hot metal parts.** This could result in serious personal injury including burns.
- **This Equipment is not intended for use by persons with reduced physical, sensory or mental capacities. Do not allow persons unfamiliar with the Equipment or these instructions to operate the Equipment.** Use of Equipment by such persons could result in a hazardous situation.
- **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the Equipment in unexpected conditions.
- **Do not use the Equipment if the switch does not turn it on or off.** Any Equipment that cannot be controlled with the on/off switch is dangerous and must be repaired.
- **Disconnect the plug from the power source before making any adjustment or cleaning the Equipment.** This may result in increased risk of electric shock.
- **Do not use any accessory or attachment not recommended by Meister Cook. Do not operate Equipment on its side or inverted. Do not introduce foreign, non-approved objects into Equipment.** Use of Equipment other than intended could result in a hazardous situation.
- **Maintain the Equipment. Check for breakage of cords, plugs and other parts that may affect the Equipment's operation. If damaged, have the Equipment repaired before use.** Many accidents are caused by poorly maintained Equipment.
- **Use the Equipment in accordance with these instructions and in the manner intended, taking into account the working conditions and work to be performed.** Use of the Equipment for operations different from those intended could result in a hazardous situation.

## SERVICE

- **Have Equipment serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the Equipment is maintained.
- **When servicing equipment, use only identical replacement parts. Follow instructions in the Maintenance section in this manual.** Use of unauthorized parts or failure to follow Maintenance instructions may create a risk of shock or injury.

## EXTENSION CORD INSTRUCTIONS

Make sure that an extension cord has the capacity to handle the current the Equipment will draw. An undersized extension cord will cause a drop-in line voltage, resulting in overheating and loss of power. The minimum recommended American Wire Gauge (A.W.G.) for an electric cord up to 6' is 18 AWG and 16 AWG for electrical cord length over 6'. Consult with extension cord manufacturer before use. Only round jacketed cords listed by Underwriter's Laboratories (UL) shall be used. Before using any extension cord, inspect it for loose or exposed wires and cut or worn insulation. Do not attempt to modify the electric plug or electric cord in any way.



WARNING: Keep the extension cord clear of the working area. Position the electric cord so that it will not get caught on other equipment or interfere in work space. Failure to do so can result in serious personal injury.



WARNING: Check extension cords before each use. If damaged, replace immediately. Never use Equipment with a damaged cord since touching the damaged area could cause electrical shock resulting in serious injury.

## SITE PREPARATION AND INSTALLATION

These instructions must be retained by the owner/user for future reference.

This Equipment is built to comply with applicable standards for manufacturers, including approval agencies, such as UL, NSF, CSA, ETL, and others. Many local codes exist, and it is the responsibility of the owner and installer to comply with these codes.

Check the electrical rating label to ensure that the Equipment is connected to the correct voltage, phase, amperage and wattage that are stated on the Equipment's identification label. The identification label is located on the control panel plate of the Equipment. A secondary label is included inside the Equipment behind the control panel plate. This Equipment should be connected to a power supply that is 120 volts, 60 Hz, AC only. Do not operate on direct current (DC). A substantial voltage drop will cause a loss of power and the Equipment may overheat. If the Equipment does not operate when plugged into an outlet, check the power supply.

Do not operate more than two Hot Hold® Systems on a single 120V, 20 Amp circuit.

Observe all clearance requirements to provide air supply for proper operation, as well as sufficient clearance for servicing. Keep the area around the Equipment free and clear of combustibles. Dimensions and clearance specifications are shown under "Specifications for Hot Hold®" and "Clearances Requirements for Hot Hold®".



**WARNING:** The installation and connection must comply with national and local electrical codes. Ensure electrical supply conforms with electrical characteristics shown on the identification label. All services must be performed by a qualified technician.




**CAUTION:** The operator of this Equipment is solely responsible for ensuring safe holding temperature levels for all food items. Failure to do so could result in unsafe and unhealthy food products for customers.



## SPECIFICATIONS FOR HOT HOLD® Series

Meister Cook's Dry Moist Food Warmer (Hot Hold® Series) with ThermalBreeze™ Technology achieves high energy efficiency with a thermal air curtain and hot convection air re-circulation. Energy harvesting from the warm air stream allows the Hot Hold® units to operate with low energy consumption. Simple and quick configuration changes allow for dry/crispy or moist/humid food holding. Innovative features allow for easy maintenance, service and quiet operation. **Designed and Manufactured in the USA, US Patents #9,027,470 #9,962,037 & Other Patents Pending.**

Model: HH-2x2-TT

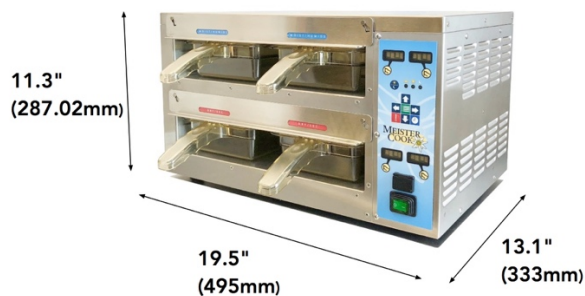

### Construction

Type 304 Stainless Steel

### Electric Power

900W, 7.5 Amps, 120V, 60Hz, 1Ø, NEMA 5-15P

### Overall Dimensions

11.053" (280.746mm) H x 19.5" (495mm) L x 13.1" (333mm) D

### Weight

62 lbs.


### Pan Size

4 x Standard 1/3 size, 2.5 deep pan (pans not included)

### Energy Efficiency

Power Consumption is usually less than 300W after warm-up.

Model: HH-2x2-TF

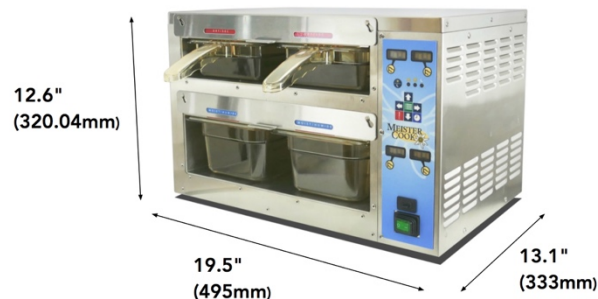

### Construction

Type 304 Stainless Steel

### Electric Power

900W, 7.5 Amps, 120V, 60Hz, 1Ø, NEMA 5-15P

### Overall Dimensions

12.393" (314.782mm) H x 19.5" (495mm) L x 13.1" (333mm) D

### Weight

65 lbs.

### Pan Size

2 x Standard 1/3 size, 2.5" deep pan (pans not included)  
2 x Standard 1/3 size, 4" deep pan (pans not included)

### Energy Efficiency

Power Consumption is usually less than 300W after warm-up.



Tested, approved and listed by ETL as per UL 197, NSF 4 and CSA 22.2

MEISTER COOK LLC

3217-A Stellhorn Rd, Fort Wayne, Indiana 46815, USA • (800) 535-7830 • (260) 399-3800

www.meistercook.com • info@meistercook.com

### Utilized Technologies

- ◆ ThermalBreeze™ Technology with gentle hot convection air stream
- ◆ Energy harvesting with re-circulation of hot air
- ◆ Digital controls for hold time and temperature readout, programmable for new food items
- ◆ Simple and quick configuration change between dry or moist food holding
- ◆ High efficiency single heat source per level for radiant heat and hot convection air
- ◆ All pull-out electric panel for easy servicing
- ◆ Extremely quiet operation
- ◆ Easy pan removal and interior cleaning
- ◆ Removable front panel
- ◆ Stackable
- ◆ USB Port

Note: Specifications and information are subject to change without notice.

## HOT HOLD® MODELS

### Construction

Type 304 Stainless Steel

### Electric Power

900W, 7.5 Amps, 120V, 60Hz, 1Ø, NEMA 5-15P

### Overall Dimensions

HH-2x2-TT	11.3" (351mm) H x 19.5" (495mm) L x 13.1" (333mm) D
HH-2x2-TF	12.6" (351mm) H x 19.5" (495mm) L x 13.1" (333mm) D

### Weight

HH-2x2-TT	62 lbs.
HH-2x2-TF	65 lbs.

### Pan Size

HH-2x2-TT	4 x Standard 1/3 size, 2.5" deep pan (pans not included)
HH-2x2-TF	2 x Standard 1/3 size, 2.5" deep pan (pans not included) 2 x Standard 1/3 size, 4" deep pan (pans not included)

### Energy Efficiency

Power Consumption is usually less than 300W after warm-up

---


MEISTER COOK LLC

3217-A Stellhorn Rd, Fort Wayne, Indiana 46815, USA • (800) 535-7830 • (260) 399-3800

www.meistercook.com • info@meistercook.com

## CLEARANCE REQUIREMENTS HOT HOLD® Series

This Equipment must be installed in accordance with the following clearances in order to provide proper operation and servicing of the appliance. Also, it is recommended that the Equipment be installed with sufficient clearances to provide proper cleaning and maintenance. Always check surrounding construction for potential overheating.

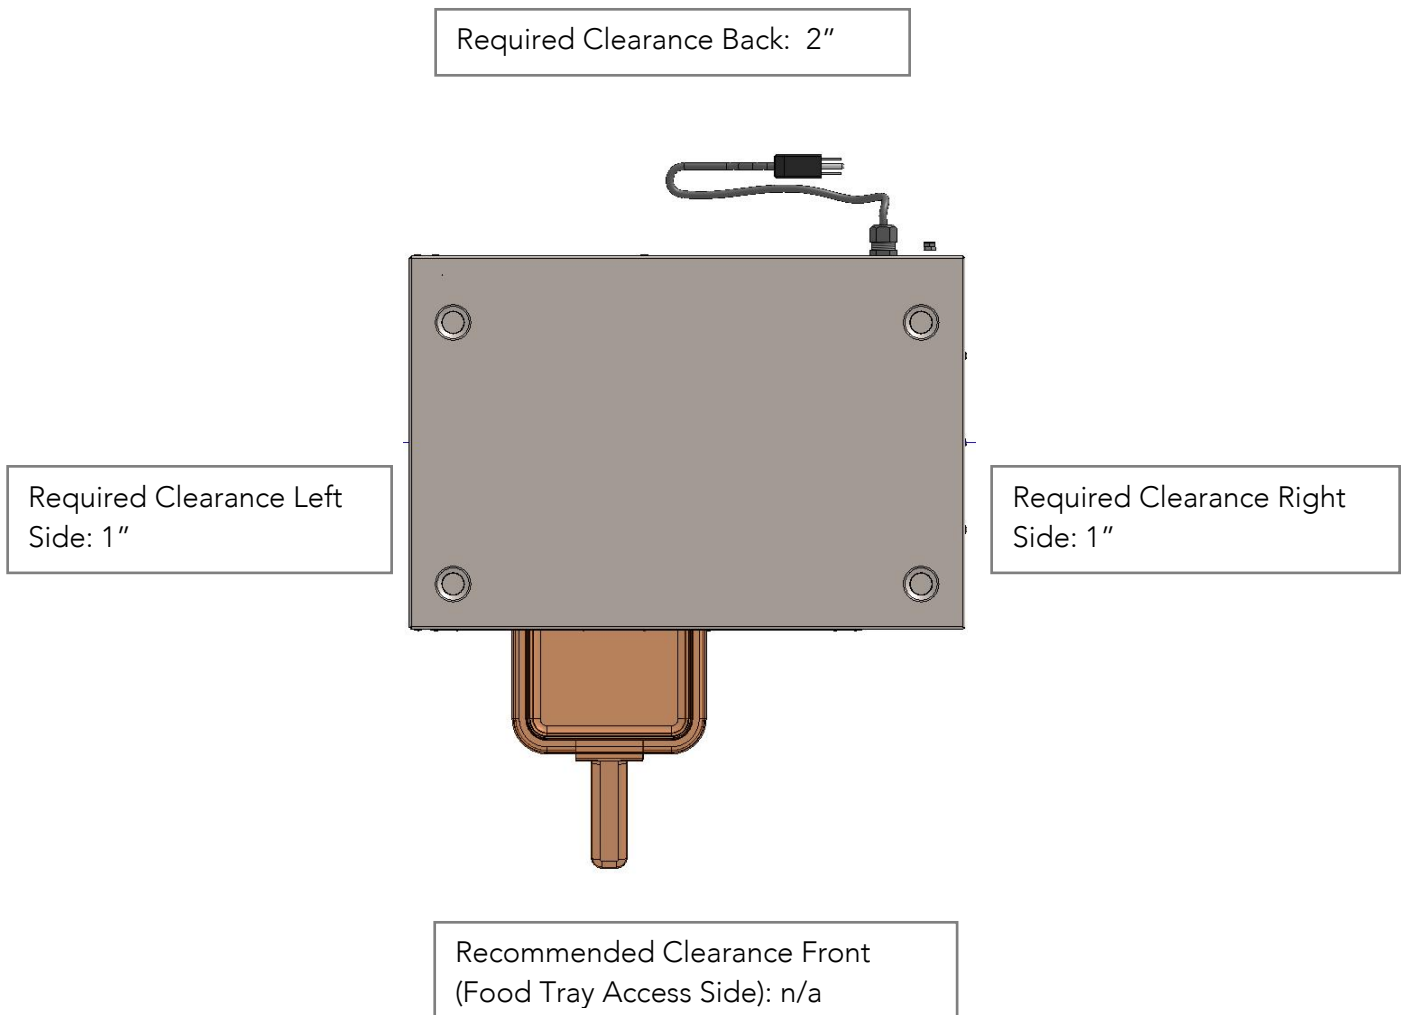

Recommended Clearances:  
Back 2", Left 1", Right 1", Front n/a

## OPERATING INSTRUCTIONS

The Meister Cook Hot Hold® Dry Moist Food Warmer was designed to provide extended holding time for various food items with a combination of hot convection air from the air outlet port and radiant heat from the bottom of the warmer. The convection air flow volume and velocity as well as the radiant air temperature has been optimized. Different food items may require different food holding temperatures that needs to be tested and then programmed into the program controls.

### OPERATION:

- Step 1: Verify that all dry/moist inserts are installed properly. Each horizontal level must have both dry/moist inserts installed in either the dry or the moist configuration.
- Step 2: Verify that both front panels are installed.
- Step 3: Verify that all food pans are installed properly.
- Step 4: After unpacking, allow the unit to acclimate to room temperature before starting.
- Step 5: Turn power rocker switch to the ON position. "I" = ON, "O" = OFF.
- Step 6: Verify that the correct food item is selected on control display.
- Step 7: Allow for a 35-minute preheat for HH-2x2-TT.  
Allow for a 45-minute preheat for HH-2x2-TF.  
Allow for a 45-minute preheat for HH-2x2-FT.  
Allow for a 60-minute preheat for HH-2x2-FF.  
Allow for a 60-minute preheat for HH-2x2-TS.  
Allow for a 60-minute preheat for HH-2x2-ST.  
Allow for a 75-minute preheat for HH-2x2-FS.  
Allow for a 75-minute preheat for HH-2x2-SF.  
Allow for a 90-minute preheat for HH-2x2-SS.

Note: The adjustable temperature set point range is 160°F – 250°F.

Note: The left bin temperature setting controls the temperature of the entire horizontal row.

Note: For optimal performance and energy efficiency, all food pans should be installed. Exceptions include adding food product to pans, removing food product from pans when speeding up system cool-down time.



**WARNING:** Do not use any attachments or accessories not recommended by Meister Cook. The use of attachments or accessories not recommended by Meister Cook can result in serious personal injury.

---

MEISTER COOK LLC

3217-A Stellhorn Rd, Fort Wayne, Indiana 46815, USA • (800) 535-7830 • (260) 399-3800

www.meistercook.com • info@meistercook.com

## HOT HOLD® PROGRAMMING INSTRUCTIONS

### HOT HOLD® WEB-BASED ONLINE PROGRAMMING

Visit the Meister Cook Hot Hold® Programming site at [www.meistercook.com/programming](http://www.meistercook.com/programming).

1. Follow the instructions to create your custom settings and download the programming file.
2. Upload the programming onto an empty USB flash drive
3. Turn off the Hot Hold® and insert the flash drive into the USB port (above the On/Off switch)
4. Turn on the Hot Hold®. The system will recognize any new software or menu updates and automatically upload these.
5. Once the upload is completed, the new Version VXX.X or Menu MXX.X will appear and blink.
6. Remove the flash drive and close the USB port.

### HOT HOLD® MANUAL PROGRAMMING



Select Bin "S Bin"



Meal Times "Meal"



Meal Indicator Lights for Breakfast, Lunch, Dinner



Program "Prog"




Temperature "Temp"



Time "Time"


Note: Left bin controls the temperature setting for entire level

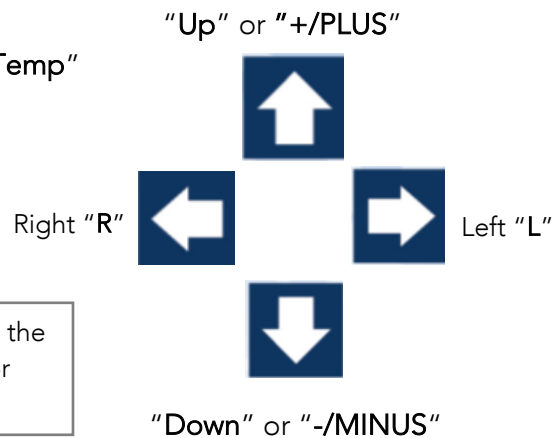


### Change Selected Food Item:

STEP 1: Select desired meal time: press/hold/select Meal  and verify your selection on the meal indicator 


STEP 2: Select Program: press/hold Prog 


STEP 3: Select the bin: push SBin 


STEP 4: Select food item: push Up/Down 

STEP 5: Save your selection: press/hold Prog 


### Change Temperature Setting for Food Item:

STEP 1: Select Program: press/hold Prog  and wait for beep.

STEP 2: Repeat STEP 1: press/hold Prog  and wait for beep.


STEP 3: Select food item: push Up/Down 


STEP 4: Select Temperature: push Temp 


STEP 5: Set temperature setting: push +/- 

STEP 6: Save your selection: press/hold Prog 


### Change Dump Time for Food Item:

STEP 1: Select Program: press/hold Prog  and wait for beep.

STEP 2: Repeat STEP 1: press/hold Prog  and wait for beep.


STEP 3: Select food item: push Up/Down 


STEP 4: Select Time: push Time  2X (Verify that "Dump Time" is flashing)


STEP 5: Set Dump Time setting: push +/- 

STEP 6: Save your selection: press/hold Prog 


### Change Cook Time for Food Item:


STEP 1: Select Program: press/hold Prog  and wait for beep.

STEP 2: Repeat STEP 1: press/hold Prog  and wait for beep.


STEP 3: Select food item: Up/Down 

STEP 4: Select Time: push Time  2X (Verify that "Cook Time" is flashing)


STEP 5: Set Cook Time setting: push +/- 

STEP 6: Save your selection: press/hold Prog 


### Change Food Item Name:

STEP 1: Select Program: press/hold Prog  and wait for beep.

STEP 2: Repeat STEP 1: press/hold Prog  and wait for beep.


STEP 3: Select food item: push +/- 


STEP 4: Select the bin (under displayed food item to be changed): push SBin 

STEP 5: Select letter (Toggle): push L/R 

STEP 6: Change letter: push +/- 



STEP 7: Move to next letter (toggle): push L/R 


STEP 8: Save your selection: press/hold Prog 

**Quick Escape:** Push Meal  to return to normal operating mode

### Set to French or English Menu Presets:

STEP 1: Turn Hot Hold® off

STEP 2: Select either Upper Left SBin  for English presets or Upper Right SBin  for French presets

STEP 3: Press/Hold selected SBin  and turn Hot Hold® on

STEP 4: Four (4) beeps will confirm saved setting

## CLEANING AND MAINTENANCE INSTRUCTIONS

It is IMPORTANT to follow cleaning and maintenance instructions and procedures to ensure satisfactory performance of your Hot Hold® Dry Moist Food Warmer. Neglecting these instructions and procedures may result in reduced food holding times, reduced performance and reliability and may void the warranty.



**CAUTION:** Allow the Equipment to cool down sufficiently before performing any cleaning or maintenance procedures. Failure to do so could result in personal injury to employees and operators.



**WARNING:** Disconnect power supply before cleaning Equipment. Failure to do so could result in serious personal injury.

### DAILY CLEANING

- Step 1: After completion of the last food holding cycle of the day, unplug Equipment and allow Equipment to cool down sufficiently before cleaning.
- Step 2: Remove the food bins, the front panels and the reversible dry/moist inserts.
- Step 3: Wipe down the internal of the warmer with a damp, not wet, soft cloth. Avoid any liquid or moisture entering the air outlet or inlet openings.
- Step 4: Clean the removable front panels and reversible dry/moist inserts with a soft cloth, dampened with warm soapy water. Do not use abrasive cleaning material on the dry/moist reversible inserts as this may remove the printed position indicators.
- Step 5: Install reversible dry/moist inserts and the removable front panels.



**CAUTION:** Do not flood the Equipment with cleaning fluids, water or other liquids. Do not allow any fluids to enter the Equipment through the air inlet or air outlet port. It will damage the Equipment.

## TROUBLESHOOTING GUIDE

Problem	Potential Cause	Corrective Action
System does not start up	No power to system	Make sure system is plugged in.
		Check power cord for damage.
		Check store circuit breaker.
	Insufficient power supply to system	Check store circuit for proper voltage.
	System fault	Call for Service.
Excessive time to reach temperature.	Pans not installed	Install pans, even if no food product is available.
	Insufficient power supply to system	Check store circuit for proper voltage
	System fault	Call for Service.
Excessive time to cool from a higher temperature set point to a lower temperature set point	Pans installed	Remove pans during cool down period.
Dry product too moist	Dry-moist insert installed in "MOIST" orientation	Flip dry-moist insert to "DRY" orientation
Moist product too dry	Dry-moist insert installed in "DRY" orientation	Flip dry-moist insert to "MOIST" orientation
No or low air flow	Insufficient power supply to system	Check store circuit for proper voltage
	System fault	Call for service
No heat	System fault	Call for service
"FLT! 1111" displayed	System fault	Call for service
"FLT! 2222" displayed	System too cold prior to startup	Turn off system. After 10 seconds, turn on system.
	Pans not installed at startup	Turn off system. Install pans. After 10 seconds, turn on system.
	Cool air from another source	Turn off system. Adjust installation. After 10 seconds, turn on system
	System fault	Call for service
"FLT! 3333" displayed	System fault	Call for service
Display malfunction	Incorrect programming	Check Operator's Manual for programming instructions
	System fault	Call for service



## HOT HOLD® DRY MOIST FOOD WARMER - PART NUMBERS

<b>Parts Number</b>	<b>Part Description</b>
HH-20103	Heater Cartridge with TC for HH
HH-20104	Tangential Blower
HH-20105	UI PCB Microprocessor for HH
HH-20106	Power Supply for HH
HH-20108	Thermocouple for HH
HH-20109	On/Off Switch DPDT
HH-20110	Power Cord
HH-20111-TT	Membrane Switch for HH-2x2-TT
HH-20111-TF	Membrane Switch for HH-2x2-TF
HH-20115	Cable, PS to SW to MT for HH-2x2-TT/TF
HH-20116	Cable, HT to PS for HH-2x2-TT/TF
HH-20117	Cable, Ground for HH-2x2-TT/TF
HH-20118	Cable, Ribbon, 10-PIN for HH-2x2-TT/TF
HH-20120	Rubber Feet (set of 4)
HH-20126-TT	Insulation Squares (set of 4) for TT
HH-20127	Electronics Cooling Fan
HH-20128	USB Cable with Dust Cover
HH-20133	DRY/MOIST label (set of 4) - ENG &FRA
HH-20147	WiFi Cable and Connector Assembly
HH-20151-TF	Insulation Squares (set of 4) for TF

## SERVICE SUPPORT

Service must be performed by a Service Center or Service Agency authorized by Meister Cook.

Contact Meister Cook online at [www.meistercook.com](http://www.meistercook.com) and enter the Contact page

or

Call Meister Cook LLC, at (800) 585 7830 or (260) 399-3800

or

Mail Meister Cook at:                      Meister Cook LLC  
3217-A Stellhorn Rd  
Fort Wayne, IN 46815  
USA



WARNING: When servicing use only identical replacement parts. Use of any other parts may create a hazard or cause product damage.



WARNING: Have Equipment serviced by a qualified repair person. This will ensure that the safety of the Equipment is maintained.

If shipping or mailing the Hot Hold® Dry Moist Food Warmer, please pack carefully in a sturdy carton with enough packing material to prevent damage. The original carton with protective insert is suitable for mailing the Hot Hold® Dry Moist Food Warmer. Include a note describing the problem to our Service Center and be sure to give your return address. We also suggest that you insure the package for your protection.

---

MEISTER COOK LLC

3217-A Stellhorn Rd, Fort Wayne, Indiana 46815, USA • (800) 535-7830 • (260) 399-3800

[www.meistercook.com](http://www.meistercook.com) • [info@meistercook.com](mailto:info@meistercook.com)

## LIMITED ONE-YEAR WARRANTY FOR COMMERCIAL PRODUCTS

### Limited One-Year Warranty:

The Meister Cook Hot Hold® Dry Moist Food Warmer is warranted from date of shipment for one year to be free from defects in material or workmanship. Any Hot Hold® Dry Moist Food Warmer found to be defective in material or workmanship may be sent back to the company after authorization for, at Meister Cook's option, repair or replacement. It is at Meister Cook's sole discretion to either repair, replace defective parts, replace the defective warmer with a manufacturer refurbished warmer, or refund the original purchase price.

This Limited Warranty does not extend to any Hot Hold® Dry Moist Food Warmer which has been subjected to misuse, abuse, improper care, improper maintenance, improper storage, accident, damage in shipment, fire, floods, power changes, improper voltage, negligence, exposure to the elements or chemicals, alteration, improper repair, unauthorized repair or other hazards or acts of God that are beyond the control of Meister Cook.

This Limited Warranty does not apply, and shall not cover any products or equipment manufactured or sold by Meister Cook when such products or commercial equipment is installed or used in a residential or non-commercial application. Installations not within the applicable building or fire codes render this Limited Warranty and any responsibility or obligations associated therein null and void. This includes any damage, costs, or legal actions resulting from the installation of any Meister Cook commercial cooking equipment in a non-commercial application or installation, where the equipment is being used for applications other than those approved for by Meister Cook.

Meister Cook guarantees the correct mechanical operation of the equipment at the time of installation. Meister Cook makes no warranty, expressed or implied of food holding performance effect as subjective judgments, product variations and or customer caused machine conditions beyond Meister Cook's ability to predict or control.

Meister Cook specifically does not warrant or guarantee or provide compensation for any lost production, lost product, lost labor or lost sales or other consequential damages that may occur as a result of equipment malfunction or failure. This disclaimer of liability for consequential damages applies whether the cause of malfunction or failure is otherwise covered by Meister Cook's warranty or not.

This Limited Warranty is available only to the original purchaser of the product and is not transferable.

THIS LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, INCLUDED BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. IN NO EVENT WILL THE COMPANY BE LIABLE FOR SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR LOSS.

This Limited Warranty shall be governed by the laws of the state of Indiana, USA, excluding their conflicts of law principles. The United Nations Convention on Contracts for the International Sale of Goods is hereby excluded in its entirety from application to this Limited Warranty.

Meister Cook, LLC  
3217-A Stellhorn Road  
Fort Wayne, Indiana 46815  
USA  
[www.meistercook.com](http://www.meistercook.com)

---

MEISTER COOK LLC

3217-A Stellhorn Rd, Fort Wayne, Indiana 46815, USA • (800) 535-7830 • (260) 399-3800

[www.meistercook.com](http://www.meistercook.com) • [info@meistercook.com](mailto:info@meistercook.com)