



BAKERLUX™ TOUCH OVENS QUICK START GUIDE

MANUAL OPERATION

1	Press POWER button to turn on oven & activate control panel.	
2	Press MANUAL COOKING CYCLE icon to bring up Parameter Settings Screen.	
3	Press TIMER icon. It will turn red. This will allow you to set cooking time for STEP 1 of your program.	
4	Set TIMER by pressing + / - , or use the slider bar until desired time appears. <i>(For continuous run, press - until INF appears on LED screen.)</i>	
5	Press TEMPERATURE icon. It will turn red.	
6	Set COOKING TEMPERATURE by pressing + / - , or use the slider bar, until desired temperature appears.	
7	<i>(Optional - for humidity; otherwise skip to 10.)</i> Press HUMIDITY icon. It will turn blue.	
8	Set HUMIDITY by pressing + or - until desired humidity % appears (from "oFF" to "100% in 20% increments.)	
9	Set fan speed by pressing FAN SPEED icon. It will turn red. Press + / - to set 1 (low) or 2 (high).	
10	<i>(Optional - for PREHEAT; otherwise skip to 13.)</i> Press < icon to add PREHEAT TEMPERATURE . Press TEMPERATURE INF icon. It will turn red.	
11	Set PREHEAT TEMPERATURE by pressing + / - , or use the slider bar until desired temperature appears.	
12	Press > icon to return to parameter setting screen.	
13	<i>(Optional - for adding up to 8 additional steps to cooking cycle; otherwise skip to 14 OR 15.)</i> Press > icon to pass STEP 1 and access parameters settings for STEP 2 . Follow directions 3 - 9 above as applicable. Repeat for each additional step desired.	
14	To start the cooking cycle <i>without</i> saving the program for another occasion, press START / STOP icon. (If preheating, wait until INSERT TRAY screen appears before putting food in oven.)	
OR		
15	To SAVE the program before starting the cooking cycle, continue with PROGRAM RECIPES (<i>see 2 above right.</i>)	

PROGRAMMING/ SAVING

1	If starting from scratch, press POWER button to turn on oven & activate control board. Then follow MANUAL OPERATION 2-13 at left. If continuing from MANUAL OPERATION 15 , see 2 below.	
2	Press the MODIFY icon.	
3	Press the " _ _ _ _ _ " field.	
4	Set a NAME for the program by typing it on the KEYPAD and then pressing OK .	
5	Press the PROG PICTURE icon, then choose a photo to go with the program.	
6	Press the SAVE icon to save the program.	
7	To immediately start cooking with the new saved program, press START / STOP icon.	
8	If program includes preheating, wait until INSERT TRAYS screen appears before placing food in oven.	

STARTING A SAVED PROGRAM

1	Press PROGRAMS icon. Scroll through saved programs by pressing > / < until desired program appears. Press the desired program.	
2	Press START / STOP icon to start program.	
3	If program includes preheating, wait until INSERT TRAYS screen appears before placing food in oven.	

CONTINUOUS RUN SETTING

1	Press TIMER icon until 000 is on the screen..	
2	Press - icon until INF appears on the LED screen.	
3	Press START / STOP icon.	

STOP A PROGRAM IN PROGRESS

	Press and hold START / STOP icon for 2-3 seconds.	
--	--	--



BAKERLUX™ OVENS QUICK CLEANING GUIDE

WARNING: Before starting any maintenance or cleaning operation, you must disconnect the electrical power supply and wait for your oven to cool down.

GENERAL

1. Wipe up any spills as they occur (after the oven has cooled down for 10-15 minutes.)
2. Never clean the oven cavity with acids, abrasives or aggressive detergents.
3. Never use a spray of water to clean the outside of your oven. This may damage the electrical components and void your warranty.

DAILY CLEANING

1. **Unplug oven and let it cool down for 10-15 minutes. Door glass must be completely cool before cleaning.**
2. Clean the oven cavity and oven door gasket using only proper products (degreaser, damp cloth.)
3. Never clean the oven cavity with acids, abrasives, or aggressive detergents.
4. Pull out and clean oven side racks and wire shelves separately, then replace when done.
5. For heavily soiled areas, let degreaser sit to penetrate before wiping with damp cloth or scrub pad.
6. Wipe door handle, door glass (inner and outer), and oven control panel using only proper products (detergent, damp cloth.)
7. Wipe dry after each cleaning process.

WEEKLY CLEANING

1. Follow protocol for Daily Cleaning.
2. Remove and clean oven door gasket
 - Pull gasket out of the channel.
 - Clean with detergent & water or dishwasher.
 - Dry and let sit.
 - To replace after cleaning, push back into channel around oven door.
3. Clean the outside of the oven using only proper products (degreaser, damp cloth.)
4. Never clean the oven with acids, abrasives, or aggressive detergents.
5. Wipe dry after each cleaning process.

CLEANING THE OVEN DOOR GLASS

Door glass must be completely cool before cleaning.

*Clean each door glass using only proper products (detergent, damp cloth or sponge, &/or Scotchbrite pad.) Rinse glass and dry it completely.

FOR TOP-OPENING DOORS:



1. Open oven door fully.



2. Clean back of outer door glass & front of inner door glass.*



3. Clean back of inner door glass.*



4. Close door & clean front of outer door glass.*

FOR SIDE-OPENING DOORS:



1. Open door fully. Depress glass holder clips on top & bottom of inside door, & swing open inner door glass.



2. Clean back of outer door glass & front of inner door glass.*



3. Swing inner door glass forward until top & bottom glass holder clips click & hold glass. Clean back of inner door glass.*