

Daily Cleaning for AccuTemp Evolution™ Steamer



WARNING: Do not use a water jet or pressure washer to clean steamer!

CAUTION: Never use a chlorine based cleaner in the cooking chamber or on the exterior of the appliance.

- 1 At the end of the day, drain out water. Add CLEAN water and 1 cup of white vinegar to the cooking compartment. Start the steamer in the Cook Mode for 15 minutes. The cooking compartment will automatically fill with water if unit is connected. If the steamer does not have the automatic water fill option, manually add water (about 2.5 gallons) up to the water fill line, located next to the water sensors. Shut the door.
- 2 After 15 minutes, turn Evolution off. Allow the cooking compartment to cool completely (140° or cooler) and then drain out the water and vinegar mixture.

CAUTION: WATER AND INSIDE OF CAVITY WILL BE HOT. USE HEAT PROTECTIVE GLOVES OR LET STEAMER COOL COMPLETELY.
- 3 Once cavity has cooled, remove the pan racks and steam collector plate (bottom cover with handle) Next, remove the steam distributor panel by unscrewing the four nuts by hand on the inside right wall and lifting off.

Wash all pieces by hand or run through the dishwasher.
- 4 Scrub the two water sensors (located in left inside of cavity) and the entire inside of cooking chamber with a non-metallic scratch pad which includes the inside three walls, bottom of steamer, and inside of door. If connected unit, take the float ball off the stem and thoroughly scrub it and the stem. Put the float back on the stem. NOTE: If float ball is not put back, steamer will not turn on.
- 5 Rinse interior of steamer with CLEAN water. Once cavity is filled with CLEAN water, drain it out.
- 6 Reinstall the steam collector plate first. This goes in the bottom of the unit. Next, place the steam distributor panel on the lip of the plate to easily match it up to the right side of the unit. Screw in all four nuts hand tight. Lastly, reinstall pan racks.
- 7 The final step is to wipe down the inside of the unit with a cloth. Fold back the flap of the door gasket and wipe away any debris. Dry entire cavity and inside of door. Leave the door open overnight to allow everything to dry completely. This will help lengthen the life of the gasket.

Exterior Cleaning: It is recommended that a stainless steel cleaner/ polish be used on all the exterior stainless steel for longevity of the appliance. Follow instructions for the cleaner used.

Lubrication of Moving Parts: It is recommended monthly to use a food grade silicone to lubricate the door hinges and the moving parts door latch to increase ease of use and longevity of these parts.

Lifetime Service & Support Hotline
(800) 480-0415

7am-7pm EST 7 Days a Week

*** Please Have 5 Digit Steamer Serial Number Available**