

# Ice Machine Cleaning & Sanitizing

HOSHIZAKI

F-450MAJ(-C) FD-650MAH-C, MWH-C, MRH-C F-801MAJ(-C), MWJ(-C) F-1002MAJ(-C), MWJ(-C), MRJ(-C), MLJ FD-1002MAJ-C, MRJ-C F-1501MAJ(-C), MWJ(-C), MRJ(-C) F-2001MWJ, MRJ/3(-C), MLJ

 
The icemaker and dispenser must be cleaned & sanitized at least twice a year.

 
## **Cleaning Prep:**

- 1 Close the icemaker water supply line shut-off valve.
- Remove the Front Panel, move the control switch to **DRAIN**. Make sure the power switch is **ON**. Replace the **Front Panel**.

Top













ON



**ATTENTION! DO NOT** leave icemaker

## Sanitizing:

• Dilute 5.25% chlorine bleach‡ with warm water (see Table below)

Sanitizing Solution	
Bleach	9.6 fl. oz (0.29 l)
Warm Water	1.6 gal. (6.0 l)

(15)

(16)


18


# Use bleach without additives

- Remove the front and top panels
- · Move the power switch to OFF
- Remove the spout-to-chute 17 strap (includes drip guide on F-1501 and larger)
- Remove the spout
- Pour the sanitizing solution 16 over the extruding head until the evaporator assembly and reservoir are full, and the solution runs out the overflow hose
- · Replace the spout, spoutto-chute strap, and drip guide (if applicable) in their correct positions.
- Allow the icemaker to sit for 10 minutes before operation
- Move the control switch to ICE
- Move the power switch to ON
- Replace the panels in their correct positions
- Make ice using the solution until the icemaker stops making ice

## all the leftover ice.

Cleaning:

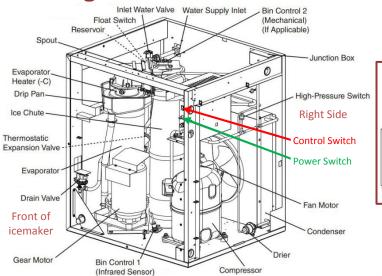

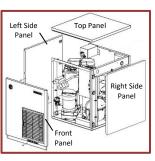




6 Dilute Hoshizaki Scale Away with warm water (see Table).

Cleaning Solution	
Scale Away	9.6 fl. oz (0.29 l)
Warm Water	1.6 gal. (6.0 l)

Pour the cleaning solution over the **Extruding Head until the Evaporator** Assembly and Reservoir are full, and the solution runs out through the Overflow Hose.

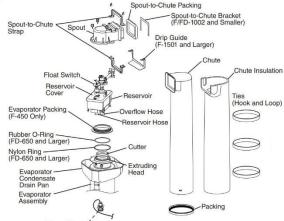



Replace the Spout, Spout-to-Chute Strap, and Drip Guide (if applicable) in their correct positions.

Allow the icemaker to soak for 10 minutes.

In bad water conditions, a more thorough soaking may be required. Remove the Left Side Panel and remove the Float Switch from the Reservoir cover. Clean the Float Switch with the solution, rinse thoroughly with clean water, and replace it back in the cover. Follow Step 6, then place a clamp on the Reservoir Hose that will block the flow to the Evaporator Assembly. Pour additional cleaning solution over the Extruding Head until the Evaporator Assembly is full.

Allow to soak for 10 minutes, remove the clamp before operation.

Otherwise, continue to Step 8.

- Wipe down the Infrared Sensor Lens, (located) on the bottom of the icemaker). Rinse the lens with a clean, damp cloth.
- Move the control switch to ICE, then move the power switch to **ON.** Replace the panels in their correct positions. Make ice using the cleaning solution until it stops.
- 10 Remove the Front Panel. Move the control switch to DRAIN, then replace the Front Panel. Allow the icemaker to drain completely.
- III Remove the Front Panel. Move the power switch to **OFF**. Open the water supply line shut-off valve to supply water to the icemaker.
- 12 Move the control switch to ICE and the power switch to ON. Allow the icemaker to fill the reservoir with water.
- After the gear motor starts, move the control switch to DRAIN. Replace the Front Panel. Allow the icemaker to drain completely.



**Gear Motor to Start** 



ON

POWER

OFF



DRAIN





Drain

Completely



The icemaker might make a noise/squealing when first started due to scale removal from auger/evaporator. This is normal in bad water conditions and will subside after 20 minutes.

14 Remove the Front Panel. Move the power switch to OFF. Replace the Front Panel. Close the icemaker water supply line shut-off valve.





Continue to Sanitation - Step (5) on front...

#### **DOWNLOAD COMPLETE INSTRUCTION MANUAL:**



hoshizakiamerica.com/manuals

Type in the model number of your icemaker (including dashes) to download manuals

## **CLEANING SCHEDULE**

Air Filter/Scoop Water Filters **Exterior** 

Dish soap, rinse well Check psi, change if req'd Stainless Steel Cleaner

Underside/Top Kit Dish soap & damp cloth

Icemaker/Dispenser Follow these instructions

Clean inlet screen/valves Water Supply Inlet Extruding Head

Water Hoses

• WEEKLY |

Inspect seal bolts/ bearing wear. Tighten or replace Inspect. Replace if req'd

**| ● BI-ANNUAL** 

### **ATTENTION!**

**DO NOT** use ammonia type cleaners. Can cause damage to icemaker

**WEAR** liquid-proof gloves and goggles to protect skin & eyes from cleaning & sanitizing chemicals

#### 

- Remove the front panel
- 19
- Move control switch to DRAIN, replace the front panel
- Allow the icemaker to drain completely
- Remove the front panel



- Move power switch to OFF
- Open the icemaker water supply line shut-off valve
- Move control switch to ICE



- Move power switch to ON
- · Allow the icemaker to fill the reservoir with water
- After the gear motor starts, move the control switch to DRAIN



- Replace the front panel
- · Allow the icemaker to drain completely
- Remove the front panel



- Move the control switch to ICE, replace the front panel
- Allow the icemaker to run for 30 minutes or produce a batch of ice
- · Remove the front panel



- Move the power switch to OFF
- Pour warm water into the dispenser/storage bin to melt any remaining ice
- Clean the dispenser/storage bin liner and cover with dish soap and a damp cloth. Rinse thoroughly with clean water
- Move the power switch to ON, replace the front cover



#### **ATTENTION!**

IF ICEMAKER IS ON DISPENSER, remember to turn on the dispenser after cleaning





