



● B-3-FM
Round Ramekin
3 oz., 3.25" dia., 1.25" H
6 dz.



● B-5-FM
Round Monkey Dish
5 oz., 4.5" dia., 1.25" H
6 dz.



● B-8-FM
Round Monkey Dish
8 oz., 5" dia., 2" H
2 dz.



B-18-FM
Round Bowl
16 oz., 7" dia., 1.75 H
1 dz.



● B-22-FM
Round Bowl
22 oz., 6.25" dia., 2.75" H
1 dz.



● B-43-FM
Round Bowl
28 oz., 10.75" dia., 1" H
1 dz.



B-42-FM
Round Bowl
1.3 qt., 10" dia., 1.75 H
1 dz.



● OP-911-FM
Oval Platter
9.25" x 6.25"
2 dz.



● SB-5-FM
Square Monkey Dish
5 oz., 4.25" L x 1" H
4 dz.



● SB-14-FM
Square Bowl
14 oz., 6" L x 1.5" H
2 dz.



● SB-48-FM
Square Bowl
1.5 qt., 10.25" L x 1.75" H
1 dz.



● SD-08-FM
Oval Side Dish
10 oz. 8.5" x 4.5", 1.25" Deep
2 dz.



● CS-5-FM
Round Plate
5.5" dia.
4 dz.



● CS-7-FM
Round Plate
7" dia.
1 dz.



● CS-9-FM
Round Plate
9" dia.
1 dz.



CS-10-FM
Round Plate
10.5" dia.
1 dz.



● SCS-4-FM
Square Plate
4" dia.
4 dz.



● SCS-6-FM
Square Plate
6" dia.
2 dz.



● SCS-9-FM
Square Plate
9.5" dia.
1 dz.



● B-110-FM
Round Bowl
10 oz.
1 dz.



CS-117-FM
Rectangular Platter
12" L x 7.5" W
1 dz.
Fits Plate Cover LID-CS117-CL



● CS-119-FM
Rectangular Platter
12.75" L x 9.5" W
1 dz.



● CS-146-FM
Rectangular Platter
14" L x 5.5" W
12 ea.



● CS-1412-FM
Rectangular Platter
14" L x 11.5" W
6 ea.



● CS-1576-FM
Rectangular Platter
15" L x 7.5" W
12 ea.



● CS-1814-FM
Rectangular Platter
18" L x 11" W
3 ea.



● CS-1511-FM
Oval Platter
15" L x 11" W
6 ea.



● CS-1813-FM
Oval Platter
18" L x 13" W
3 ea.

● New Collection Expansion Piece