



WAFFLE CLEANING & MAINTENANCE GUIDE

Good practices.

Use a waffle fork to remove waffles from the machine to avoid scratching the nonstick coating. Never use a metal utensil.

Use a cleaning brush to thoroughly clean plates without scratching.



Accessories
Coming Soon!

CAC174

CAC177


WAFFLES STICKING?

Waring Waffle Makers are equipped with a nonstick coating to prevent waffles from sticking. However, if sticking begins to occur, use a soft bristle or silicone brush to evenly coat plates with cooking oil. We do not recommend using nonstick spray because, if used over time, will cause a buildup of plate tackiness.

Buildup on plates? Plates scratched?

Plates are removable and can be easily replaced on location.

Order – **WW180XRP / WBW300XRP / WMB400XRP**

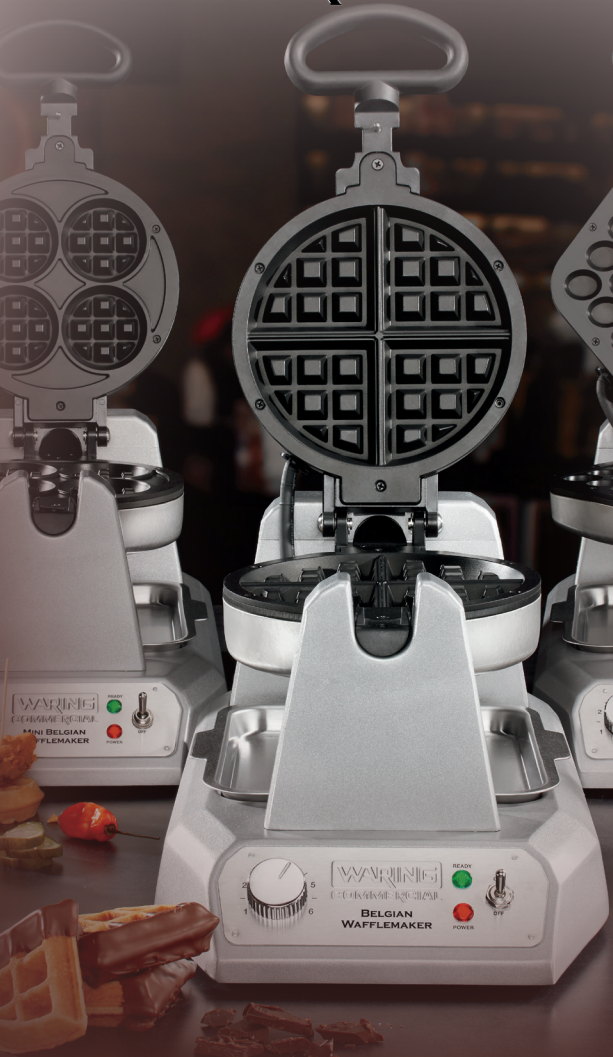

HOW TO REPLACE WAFFLE PLATES

[Watch Here](#)



PLACE NEW PLATE ON HOUSING BY ALIGNING REAR AND FRONT PROJECTIONS ONTO BASE

For Repairs, Customer Service and Questions

Weekdays 8:30 – 4:30 EST

Call: 1-800-4WARING • Email: service_waring@conair.com

Unplug waffle maker before cleaning.


DAILY STEPS

STEP 1


**TIP**

Only use brushes with soft bristles to avoid scratching the nonstick coating.

STEP 3

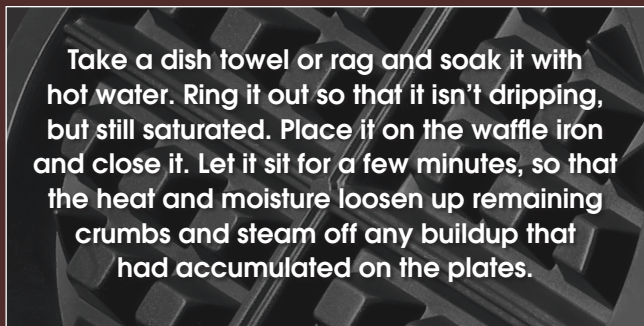

STEP 2

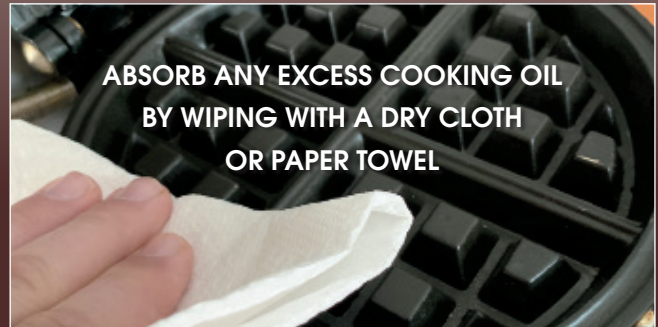

STEP 4



Patrons will often overfill the waffle makers, which causes batter to overflow. To prevent staining on the exterior of the unit, it is important to clean the housing periodically throughout each day of service.

EVERY 3–4 MONTHS

For busy establishments, it may be necessary to replace waffle plates over time.

To replace plates, order through Waring customer service at 1-800-4WARING, order online or find a local distributor or service center.

NOTE: Any other servicing should be performed by an authorized service representative.

Plates should not be removed for cleaning. Waffle plates are not dishwasher safe.