


Daily Cleaning for the PLEXOR Oven

Daily Cleaning

Follow the steps below when cleaning your PLEXOR oven. Use only TurboChef® -approved cleaning chemicals. The use of any other cleaning products may damage critical oven components, resulting in a non-warranty service call.

Supplies and Equipment

TurboChef® Oven Cleaner (Product Number: 103180), Kay ClickSan® sanitizer, nylon scrub pad, clean damp and dry towels, disposable gloves, protective eyewear, dust mask (optional)

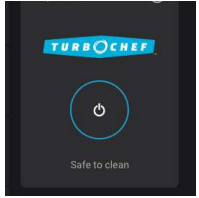

Step 1

Step 1: Prepare the Oven

⚠️ WARNING: The oven operates at approximately 500°F (260°C) and may cause injury if not allowed to cool properly.

- Turn off the oven by pressing and holding the On/Off button.
 - Cooling takes approximately 30 minutes.
- DO NOT proceed to Step 2 until the oven is completely cool.



Step 2

Step 2: Remove the Cooking Racks

⚠️ WARNING: Be sure the oven interior is cool before removing these items.

- Remove the racks from each oven module.
- Spray with oven cleaner and let sit for 10 minutes.
- Scrub with a nylon scrub pad.
- Rinse with water and dry with a clean towel.



Step 3 (figure A)

Step 3: Remove the Doors

- Turn the clamp to release the door (Step 3, figure A).
- Tilt the door back to remove it (Step 3, figure B).
- Spray with oven cleaner and let sit for 10 minutes.
- Scrub with a nylon scrub pad.
- Rinse with water and dry with a clean towel.

⚠️ CAUTION: DO NOT soak the rapid cook door. Doing so can damage critical oven components, resulting in a non-warranty service call.



Step 3 (figure B)

Step 4: Remove the Top and Bottom Jetplates

Impingement and Convection Modules Only


- Remove the two thumb screws securing the top and bottom jetplates.
- Pull down (top jetplate) and pull up (bottom jetplate) to remove them from the cavity.
- Spray with oven cleaner and let sit for 10 minutes.
- Scrub with a nylon scrub pad.
- Rinse with water and dry with a clean towel.



Step 4

Step 5: Clean the Oven Interior and Sleigh

- Use a food vacuum or damp towel to remove large particles from the oven cavity and sleigh.
- Spray TurboChef Oven Cleaner on the top surface of the oven sleigh and onto the top, bottom, and sides of the interior

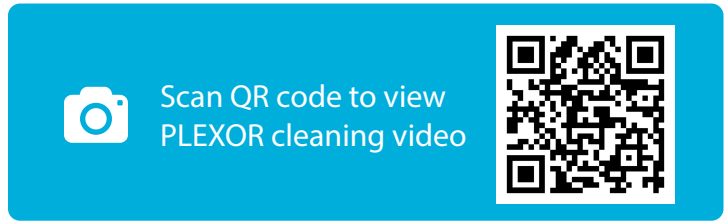

Step 5

Step 5: Continued

⚠️ CAUTION: DO NOT spray Oven Cleaner into any holes on the oven wall. Doing so can damage critical oven components, resulting in a non-warranty service call.

- Allow Oven Cleaner to penetrate stains for 10 minutes.
- Clean the oven interior and sleigh with a nylon scrub pad.
- Use a clean damp towel to wipe surfaces.




Step 6

Step 6: Clean the Air Filters

⚠️ CAUTION: TurboChef does not recognize blocked air vents as a warrantable claim. The filter must be cleaned regularly or replaced if damaged. During oven operation, the filter must remain in place at all times.

- Remove the air filters from the back of the oven.
- Rinse the air filters with hot water.
- Allow the air filters to dry completely.

⚠️ CAUTION: DO NOT operate the oven without the air filter in place.

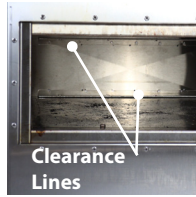

Step 7 (figure A)

Step 7: Reinstall Components

- Reinstall the top and bottom jetplates. When installing the jetplates, make sure the top jetplate sits above the marker and the bottom jetplate sits below the marker (step 7, figure A).
- Reinstall the doors. Make sure the door notches align with the slots on the sleigh (step 7, figure B). Secure the door clamp.
- Reinstall the oven racks. The Rapid Cook Module has a notch that must be installed facing the door (step 7, figure C).
- Reinstall the air filters.



Step 7 (figure B)



Step 7 (figure C)

Step 8: Clean the Oven Exterior

- Wipe the oven exterior with a clean, damp towel.
- Before wiping down the user interface, touch the three bars ≡ in the top-left corner to access the "Clean Screen" mode. When this option is selected, the screen will temporarily lock for 10 seconds to allow for cleaning.

⚠️ CAUTION: DO NOT spray chemicals into any openings, such as the louvers on the side panels or the rear vent catalyst housing. Doing so can damage critical oven components, resulting in a non-warranty service call.



Step 8

- The oven is ready to turn on.