


OVERVIEW

The timer accepts user input and provides feedback on the status of the dishmachine.

Cycle steps are the different sub-cycles (fill, drain, etc.) of the total wash cycle.

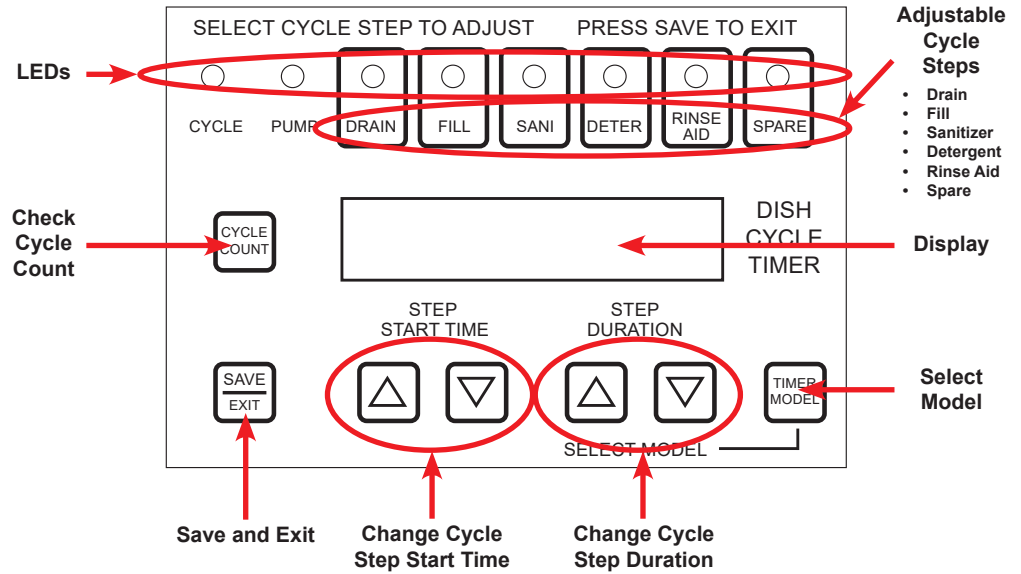


POWERING ON

The display will read "JACKSON WWS" and the firmware version when powered on. This is the Default/Home screen.


- If inactive for 15 seconds the blue backlight will turn off.
- If inactive for 30 seconds the display will turn off.
- Inactivity timer will reset if any button is pushed.
- Push any button while inactive and the display will turn on and show the Home screen.

SELECTING MODEL

1. With the display on, press **TIMER MODEL**. Display will show "SELECT MODEL" and the currently-active model.

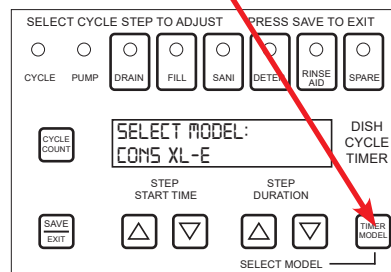

2. Select correct model using **ARROW** buttons under **STEP DURATION**.
3. Press **SAVE/EXIT**.

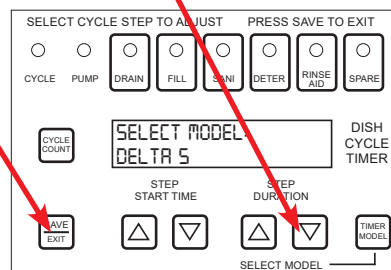

- Models**
- CONS XL2
 - CONS XL-E
 - (Use for XL-E, XL-E-FL, and XL HH)
 - CONS XL-E-LTH
 - DELTA 5


CHANGING CYCLE STEP TIMES

The first two steps (CYCLE and PUMP) are fixed and can't be adjusted. All other steps are adjustable.


Timing of the total wash cycle begins when an open door is closed (or when START is pressed on Delta 5-E). Machine returns to IDLE after one full cycle.

Change is also saved if inactive for 10 seconds or any other button is pressed.


1. Press button for step being changed. The LED for that step will come on.

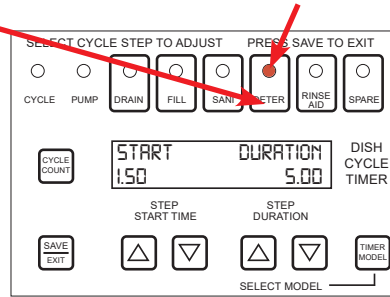


2. Change STEP START TIME or STEP DURATION using ARROW buttons (adjustments are made in 0.25-second increments).

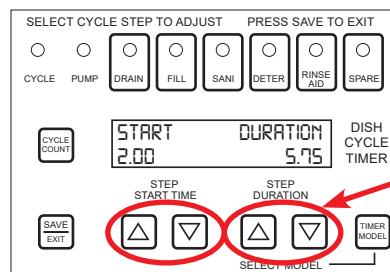

3. Press SAVE/EXIT to save the change and exit.

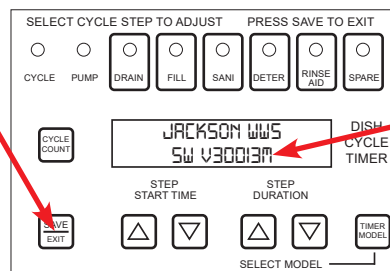


4. Repeat with other steps as needed.
5. To review current settings for a given step, press button for that step during IDLE. Its current STEP START TIME and STEP DURATION will be displayed.

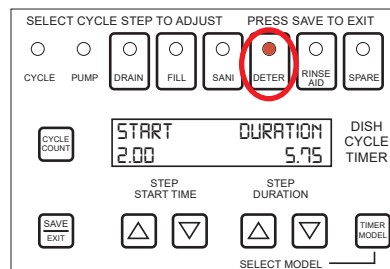


RESETTING TO FACTORY DEFAULTS

1. Press and hold CYCLE COUNT button and DOWN ARROW button (under STEP DURATION) simultaneously for 3–4 seconds.

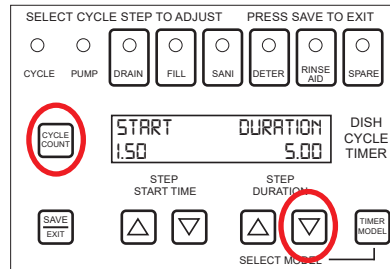

2. Resets all settings to factory defaults for the active model. Cycle count is unaffected by the reset.
3. Firmware version on the Home screen shows "F" at the end, indicating the timer is now set to factory defaults for the active model.


Firmware version changes, so number will be different depending on when timer was installed.

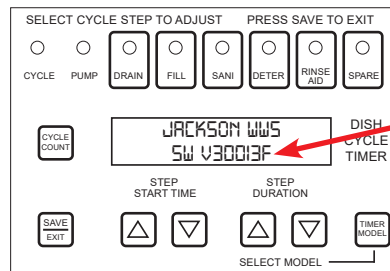

"M" = Modified Timing
"F" = Factory Defaults


CHECKING CYCLE COUNT

1. Press CYCLE COUNT button. Cycle count will show on display.

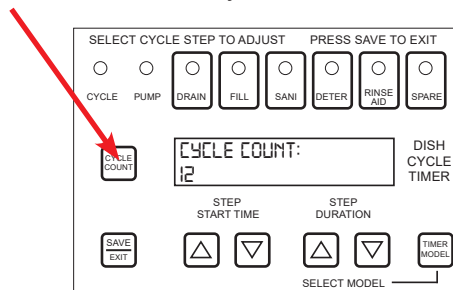

PLANT TEST MODE

1. Press and hold CYCLE COUNT button and DOWN ARROW button (under STEP START TIME) simultaneously for 3–4 seconds.

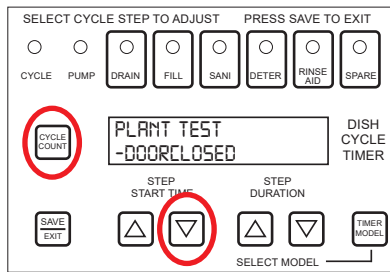


2. Press and hold the DRAIN button. The DRAIN output stays on while the button is held. The output turns off when the button is released. Repeat for the other seven buttons (use SAVE/EXIT to activate CYCLE output, use CYCLE COUNT to activate PUMP output). Second row of display shows outputs and inputs that are active.

After 15 seconds of no button being pressed, the timer exits the plant test mode.

If more than one input is on, the first letters of each will show (e.g. "Drain-DH" indicates the DRAIN output and DoorClosed and Heavy inputs are on).

Outputs


- Cycle
- Wash
- Drain
- Fill
- Sani
- Deter
- Rinse
- Spare

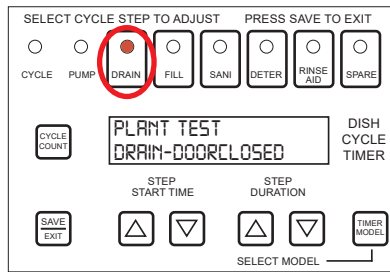

Inputs

- DoorClosed
- Start
- LTH Only
- Heavy
- Medium

3. Plant test mode can also be used to prime chemicals if the machine has no priming function. Open door and press and hold the SANI button until sanitizer is seen entering the wash sump/tank and no air is in the line.

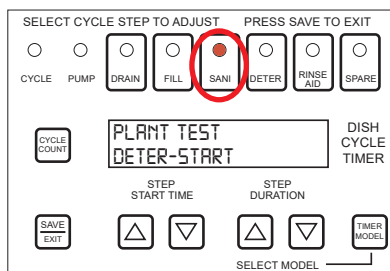

4. Repeat for DETER and RINSE AID buttons.