

HOT HOLD® PROGRAMMING INSTRUCTIONS

HOT HOLD® WEB-BASED ONLINE PROGRAMMING

Visit the Meister Cook Hot Hold® Programming site at www.meistercook.com/programming.

1. Follow the instructions to create your custom settings and download the programming file.
2. Upload the programming onto an empty USB flash drive
3. Turn off the Hot Hold® and insert the flash drive into the USB port (above the On/Off switch)
4. Turn on the Hot Hold®. The system will recognize any new software or menu updates and automatically upload these.
5. Once the upload is completed, the new Version VXX.X or Menu MXX.X will appear and blink.
6. Remove the flash drive and close the USB port.

HOT HOLD® MANUAL PROGRAMMING



Select Bin "S Bin"



Meal Times "Meal"



Meal Indicator Lights for Breakfast, Lunch, Dinner



Program "Prog"




Temperature "Temp"



Time "Time"

Note: Left bin controls the temperature setting for entire level

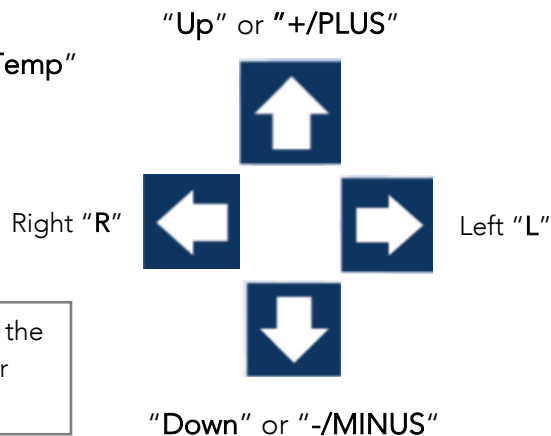


MEISTER COOK LLC


3217-A Stellhorn Rd, Fort Wayne, Indiana 46815, USA • (800) 535-7830 • (260) 399-3800


www.meistercook.com • info@meistercook.com

Change Selected Food Item:

STEP 1: Select desired meal time: press/hold/select **Meal**  and verify your selection on the meal indicator 


STEP 2: Select Program: press/hold **Prog** 

STEP 3: Select the bin: push **SBin** 


STEP 4: Select food item: push **Up/Down** 

STEP 5: Save your selection: press/hold **Prog** 


Change Temperature Setting for Food Item:

STEP 1: Select Program: press/hold **Prog**  and wait for beep.

STEP 2: **Repeat STEP 1:** press/hold **Prog**  and wait for beep.


STEP 3: Select food item: push **Up/Down** 


STEP 4: Select Temperature: push **Temp** 


STEP 5: Set temperature setting: push +/- 

STEP 6: Save your selection: press/hold **Prog** 


Change Dump Time for Food Item:

STEP 1: Select Program: press/hold **Prog**  and wait for beep.

STEP 2: **Repeat STEP 1:** press/hold **Prog**  and wait for beep.


STEP 3: Select food item: push **Up/Down** 

STEP 4: Select Time: push **Time**  2X (Verify that "Dump Time" is flashing)


STEP 5: Set Dump Time setting: push +/- 

STEP 6: Save your selection: press/hold **Prog** 


Change Cook Time for Food Item:

STEP 1: Select Program: press/hold **Prog**  and wait for beep.

STEP 2: **Repeat STEP 1:** press/hold **Prog**  and wait for beep.

STEP 3: Select food item: **Up/Down** 

STEP 4: Select Time: push **Time**  2X (Verify that "Cook Time" is flashing)


STEP 5: Set Cook Time setting: push +/- 

STEP 6: Save your selection: press/hold **Prog** 


Change Food Item Name:

STEP 1: Select Program: press/hold **Prog**  and wait for beep.

STEP 2: **Repeat STEP 1:** press/hold **Prog**  and wait for beep.

STEP 3: Select food item: push +/- 


STEP 4: Select the bin (under displayed food item to be changed): push **SBin** 

STEP 5: Select letter (Toggle): push **L/R** 

STEP 6: Change letter: push +/- 

STEP 7: Move to next letter (toggle): push **L/R** 

STEP 8: Save your selection: press/hold **Prog** 

Quick Escape: Push **Meal**  to return to normal operating mode

Set to French or English Menu Presets:

STEP 1: Turn Hot Hold® off

STEP 2: Select either **Upper Left SBin**  for English presets or **Upper Right SBin**  for French presets

STEP 3: Press/Hold selected **SBin**  and turn Hot Hold® on

STEP 4: Four (4) beeps and confirm saved setting