


SETTING UP YOUR PRODUCT


- Carefully remove all parts from packaging.
- Make sure you have all parts listed:
 - 1 acrylic panel
 - 2-4 feet (depending on model)
- Assemble product by sliding feet into the slots at the bottom of the panel.
- Place sneeze guard on flat, stable surface.

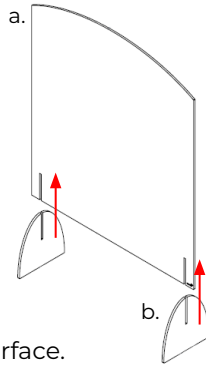

SPECIFICATIONS

Material: 0.24IN Clear Acrylic

Item Number	Dimension W x D x H (IN)	Window Dimension W x H (IN)	Replacement Foot
AG001	24x4.7x15.5	n/a	AGF001
AG002		16x5	
AG003		n/a	
AG004	36x4.7x15.5	28x5	
AG005		n/a	
AG006		32x5	
AG007	24x8x28	n/a	AGF002
AG008		16x6.5	
AG009		n/a	
AG010	36x8x28	28x6.5	
AG011		n/a	
AG012		32x6.5	
AG013*	48x10x28	32x6.5 (Door: 24x15)	AGF003
AG014		n/a	
AG015		16x6.5	
AG016	36x10x40	n/a	
AG017		28x6.5	
AG018		n/a	
AG019	48x10x40	32x6.5	
AG020*		32x6.5 (Door: 24x15)	

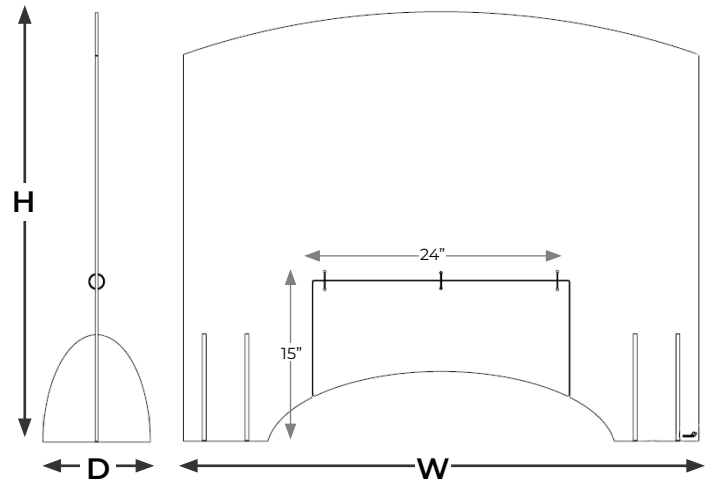

CLEANING & CARE INSTRUCTIONS

To maintain the quality of your sneeze guard, wash all parts in warm water with a mild soap. Rinse thoroughly with clean, cold water. Dry with a soft sponge or cloth to prevent water spots.

- DO NOT put any part of the unit through dishwasher or dryer machine.
- DO NOT use any abrasive materials such as scrapers or metal-based brushes.
- DO NOT use harsh chemicals or abrasive cleaners.

