




## Installation Instructions for K-6 BASKET DRAIN

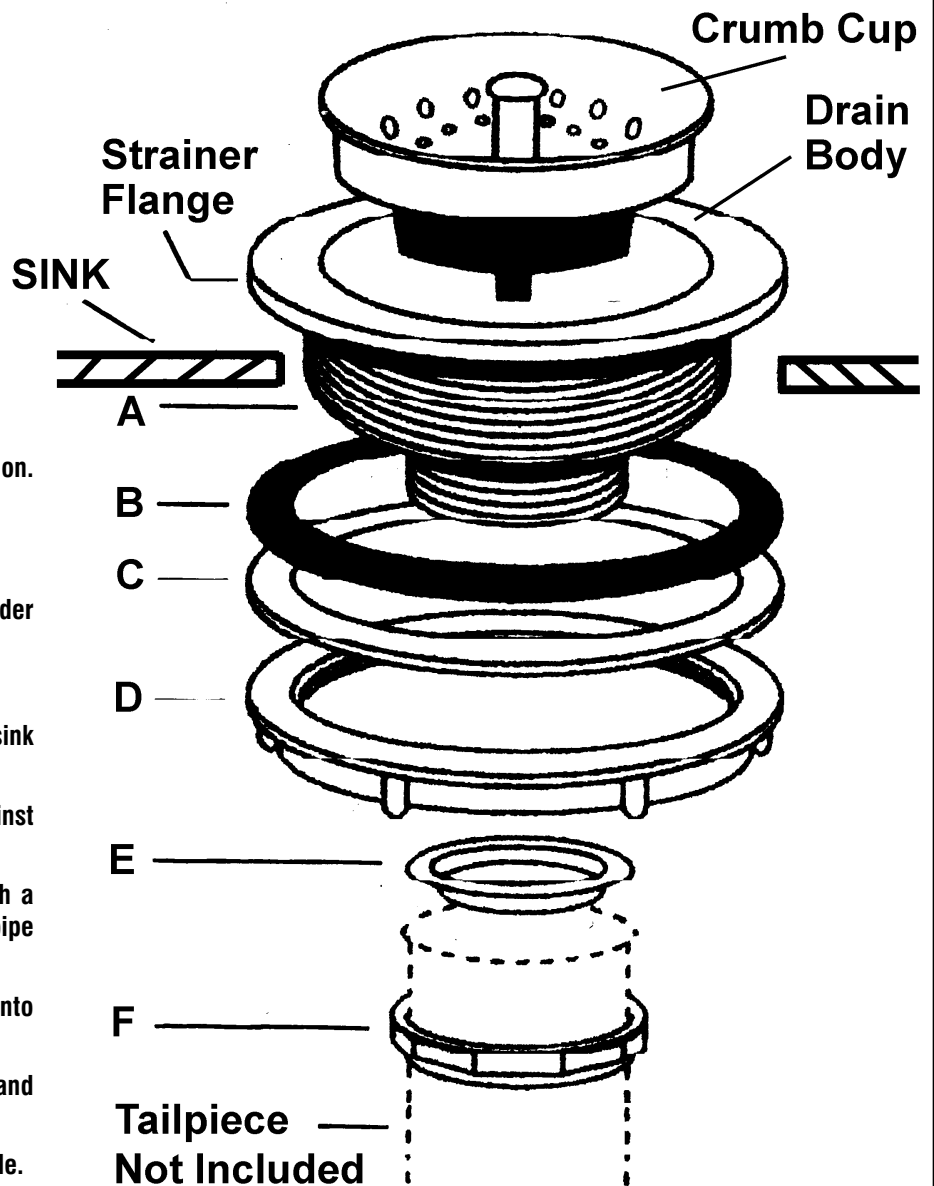

### INSTALLATION INSTRUCTIONS:

Read all instructions carefully before installation.

1. Thoroughly clean area around sink opening.
2. Disassemble K-6 Basket Drain.
3. Apply 1/16" bead of plumber's putty under edge of strainer flange.
4. Place drain body (A) into sink opening.
5. Place rubber washer (B) directly against sink bottom, then fiber washer (C).
6. Thread locknut (D) onto drain body against washers.
7. Tighten locknut by gently tapping lugs with a screwdriver and hammer or by using a large pipe wrench. (Do not over tighten).
8. Place flanged tailpiece washer (E) onto tailpiece (not included).
9. Place coupling nut (F) over tailpiece and thread onto strainer body.
10. Connect waste line per local plumbing code.