



ASSEMBLY INSTRUCTIONS

6716 HB | POLYURETHANE TASK CHAIR

TASK CHAIR

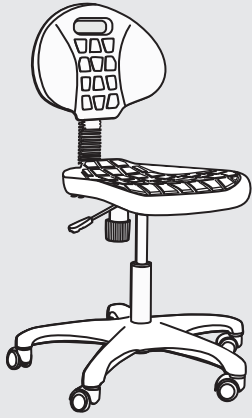


CHAIR COMPONENTS

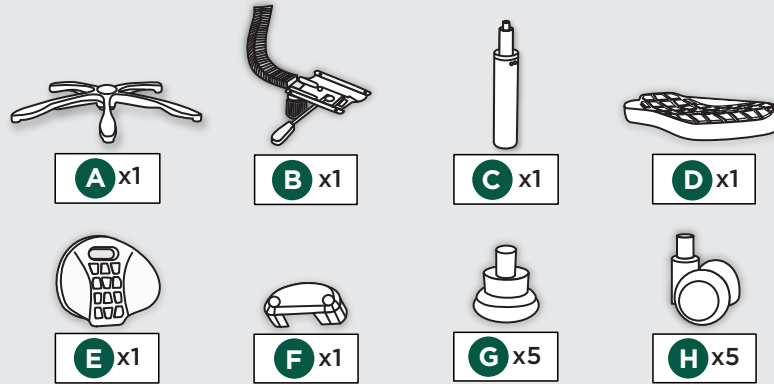


INCLUDED HARDWARE



1 Insert Glides **G** or Casters **H** into each of the 5 legs **A**. Insert column **C** firmly into the center of leg base.

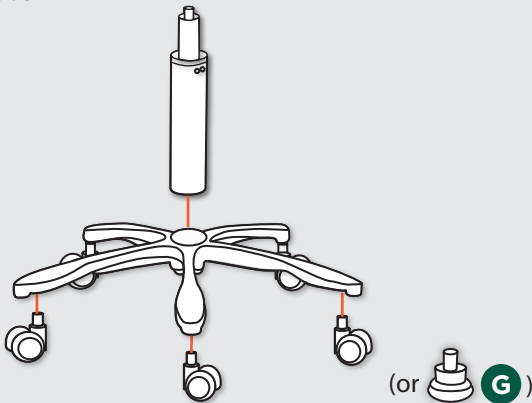


2 Align Seat Mounting Plate/Backrest Arm **B** with Bolt holes in underside of seat **D**. Loosely insert 4 seat Bolts **2** through holes on Seat Mounting Plate into the holes on the underside of Seat **D**, and only tighten slightly using the included Allen Key **1**. Once all 4 Bolts **2** are properly inserted, tightly secure them in a crossed fashion.

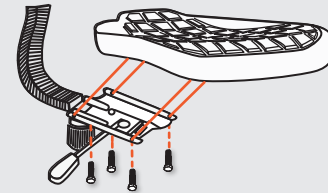


! Ensure that all Bolts are fastened tightly.

3 Once Seat Mounting Plate/Backrest Arm **B** has been installed to Seat **D**, place Seat **D** over upper portion of Column **C** and push down firmly.

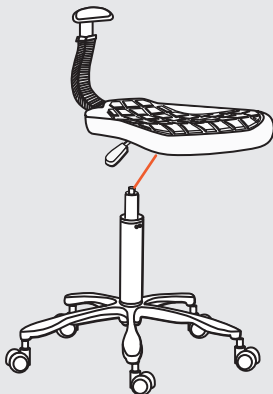

4 Place Backrest Bracket **F** onto the outer side of Backrest Arms **B** top plate. Then place the Backrest **E** in front of top plate. Align the holes on the Backrest **E**, Backrest Arm **B**, Bracket **F** and use the 2 Bolts **2** to tightly secure them together.

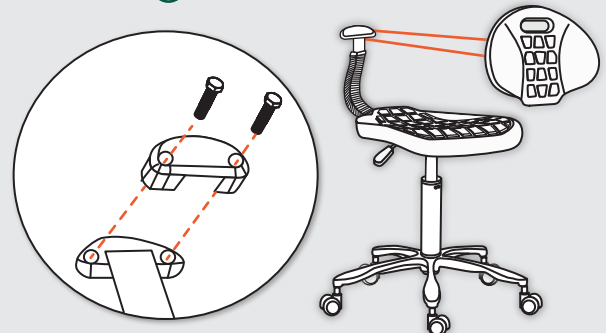

! Double check all Bolts to be tightened securely before use. Check all Bolts periodically. Failure to completely tighten the Bolts may result in tipping and possible injury!

Congratulations, your Task Chair is now assembled and ready to be used!

Dear Customer, Thank you for your purchase. Although extreme care goes into manufacturing & packaging of this product, mistakes are possible. If you encounter any missing parts or difficulty in assembly, please contact our customer service Toll Free at 1-800-261-4112 or info@nationalpublicseating.com for courteous & immediate resolution to your problem.