


# OWNER'S MANUAL

# CAMDOLLIES® FOR DISH RACKS



CD2020

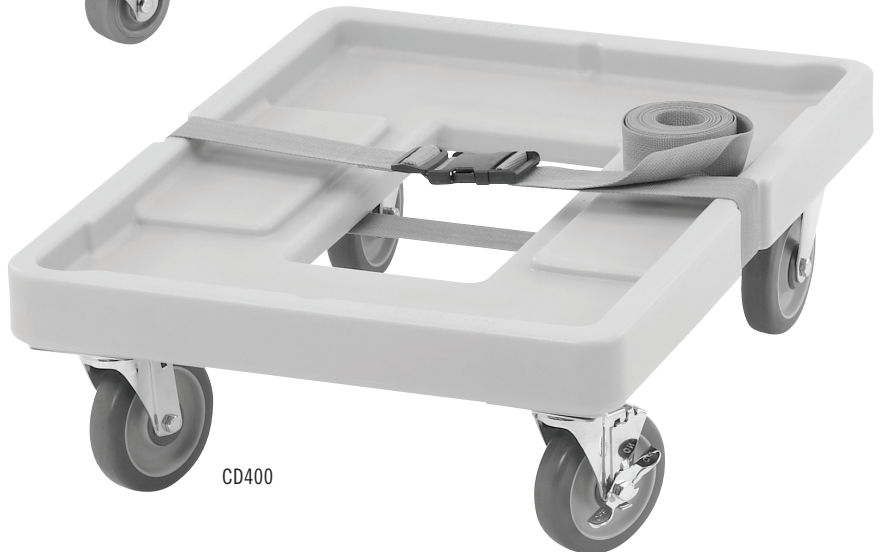

CD400

Congratulations on the purchase of your new Camdolly! This Owner's Manual provides you with a guide to maintaining your Camdolly. If you have any further questions, please do not hesitate to contact us, visit our Web site at [www.cambro.com](http://www.cambro.com) or call our Customer Service Department.



**CAMBRO**<sup>®</sup>  
TRUSTED FOR GENERATIONS™

## I. Maintenance and Cleaning

### (A) Cleaning Instructions

- If necessary, all Camdollies® can be washed with warm, mild soapy water and a plastic or bristle brush. Never use a metal brush or abrasive cleaners.
- Steam cleaning is also acceptable
- Clean the drain faucet with a small plastic brush and mild detergent and rinse well. Air dry.



### (B) Caster Maintenance

Caster maintenance should be performed each time your Camdolly has been washed or steam cleaned.

1. Grease swivel raceway of caster using a lubricant such as Lubriplate #930-AA, Keystone #84EPXLT multi-purpose grease or equivalent. Apply grease using a grease gun with a needle nose adapter or a tube-type applicator such as Sta-lube Moly-graph Assembly Lube. These can be obtained at most auto parts stores.
2. Use a light oil such as WD-40 on the hub. Check caster for damage and test caster spin and swivel rotation before returning to service.

## II. Replacement Parts

Please visit [www.cambro.com](http://www.cambro.com) for a complete list of replacement parts. The model number of the Camdolly is required to determine the correct replacement part. The model number can be found on the bottom of the unit.

**CAMBRO U.S.A.**  
5801 Skylab Road  
Huntington Beach, CA 92647  
P.O. Box 2000  
Huntington Beach, CA 92647-2000  
TEL: (714) 848-1555  
FAX: (714) 843-2630

**C.E.L.**  
TEL: (31) 168 707 210  
FAX: (31) 168 707 211

**NORTH IRELAND & UK**  
TEL: 0800 587 0057 Toll Free  
FAX: 0845 280 3411

**IRELAND**  
TEL: 1800 509 046 Toll Free  
FAX: 01 633 55 76

**CAMBRO-ÖZAY PLASTİK SAN.ve TİC.A.Ş**  
TEL: +90 262 7512940  
FAX: +90 262 7511879

## III. Warranty

**Cambro warrants to the original buyer that if a product proves defective:**

1. Within 1 year from the date of manufacture, Cambro will replace the product free of charge; or,
2. After 1 year and up to 2 years from the date of manufacture, Cambro will grant a credit of  $\frac{2}{3}$  off replacement product; or,
3. After 2 years and up to 3 years from the date of manufacture, Cambro will grant a credit of  $\frac{1}{3}$  of the original price towards a replacement product.

# CAMBRO®

© Cambro Manufacturing Company, 5801 Skylab Road, Huntington Beach, CA 92647  
TEL 714 848 1555 FAX 714 842 3430 Customer Service Dept. 800-833-3003

LITX12UMCDEX01  
RPK-I-33s-00-00-16/02/2012