


Date:

Project Name:

100SC-72 72" x 72" (1829 x 1829mm) curtain
100SC-42 42" x 72" (1067 x 1829mm) curtain

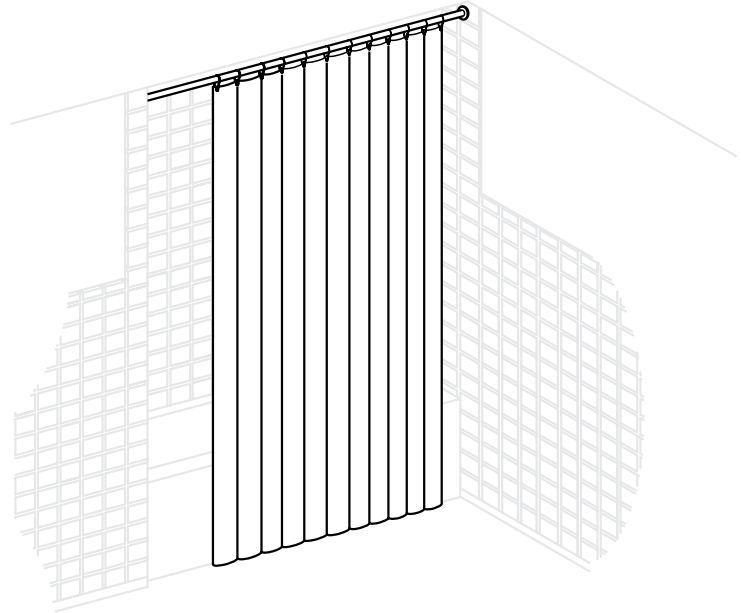

SPECIFICATIONS:

Opaque, matte white vinyl; .008" (0.2mm) thick. Metal corrosion resistant grommets along top-one every six inches. Heading reinforced front and back for double strength. Meets federal specifications.

SURE-CHEK® LINEN ANTIMICROBIAL FABRIC PROTECTION:

Flame Resistant - Sur-Chek® fabrics resists combustion and will self-extinguish when the source of flame is removed.

Stain Resistant - Most oils, greases, and contaminants may be wiped off with soap, water or mild cleansers. Curtains are easily cleaned in place and maintain a fresh look.

Antistatic - Sure-Chek® fabrics are specially formulated with an enduring antistatic property, "Anstat®." It prevents the build-up of retention of electrostatic charges that could interfere with the functioning of sensitive life support equipment.

Odor Resistant - Sure-Chek® fabrics have been treated to resist bacterial odors. Objectionable organic odors are decreased as a result of the active protection against odor-forming bacterial growth on fabric surfaces.

Durable - Sure-Chek® fabrics are incredibly strong, withstanding severe tear and abuse. Extra strength and tear resistance mean extended curtain life.

Antimicrobial to protect Fabric - A controlled release system continually sends the antimicrobial agent to the fabric surface. This built-in protection lasts the life of the fabric. It is not superficial treatment.

RECOMMENDED CARE:

Sure-Chek® healthcare fabrics offer "clean-in-place" convenience. Any soils or stains that may accumulate on the fabrics' surface should be removed periodically for a fresh new appearance. Use neutral soap suds and lukewarm water. Then rinse with water and allow fabric to dry.

Hard to clean spots - Standard household/vinyl cleansers and/or a soft bristle brush can be used for removing troublesome spots or stains. Heavy "dried on" soil may first require soaking to loosen. **DO NOT USE HARSH CLEANERS OR SOLVENTS.**

Laundering of Sure-Chek® healthcare fabrics is not recommended since laundering may substantially decrease the useful life of the fabric. However, if laundering is required, follow the procedures of the International Fabricare Institute:

1. Wash and rinse according to the "Synthetic Washing Procedure for Coated Fabrics" with temperatures not exceeding 100°F. (see below)
2. Extract water with centrifugal extractor.
3. Tumble dry in a steam dryer (not gas) at 120°F maximum. For tailored, precise fitted items, tumble dry without heat or air dry. **DO NOT IRON.**

Shower Curtain Hook shall be Model _____ (insert model number) of Gamco Commercial Restroom Accessories, Durant, OK.